

*Optidrive Plus 3<sup>GV</sup>*

*Advanced User Guide*

*Vertical Market Solution :  
Industrial Washing Machines*

*Revision 1.00*

**Revision History :**

<b><i>Revision</i></b>	<b><i>Date</i></b>	<b><i>Description</i></b>
01.00	01.03.06	First draft release

**Applicable standards :**

- EN 61800-5-1 : Adjustable speed electrical power drive systems
- EN 60204-1 : Safety of machinery - Part 1 : General Requirements
- EN 61800-3 : EMC product standard for Variable speed drive systems
- EN 55011 : Limits and Methods of measurement of radio interference characteristics of Industrial Equipment
- UL 508C : Power Conversion equipment
- CE Marked for Low voltage Directive

## **Contents :**

### **1. Product Overview**

- 1.1 Technology
- 1.2 Markets and applications

### **2. General Specifications**

- 2.1 Input voltage ranges
- 2.2 Output Power and Current ratings
- 2.3 Self Protection features
- 2.4 Conformance
- 2.5 Environmental
- 2.6 EMC
- 2.7 Physical Dimensions

### **3. Design Specifications**

- 3.1 User interface
  - 3.1.1 Keypad
  - 3.1.2 Display
  - 3.1.3 IrDA communications
  - 3.1.4 RS485 communications
- 3.2 Motor control module interface
  - 3.2.1 Hardware requirements
  - 3.2.2 Key features
- 3.3 User terminals
  - 3.3.1 Power terminals, earthing and screening
  - 3.3.2 Low power control terminals
- 3.4 Serial communications & optional fieldbus gateway
  - 3.4.1 IRDA communications
  - 3.4.2 RS-485 communications

### **4. Parameter definitions and access**

- 4.1 Parameter overview
- 4.2 Parameter functional descriptions

### **5. Fault codes, drive status and diagnostics**

### **6. Control function flowchart**

### **7. Special functions**

- 7.1 Hoisting application support

## **1. Product Overview**

### **1.1 Technology**

- Latest generation processing core for high performance / low cost
- Flash programmability for maximum flexibility
- Field upgradeable via IR interface
- Communications based on IrDA 1.0 and RS485
- PDA support for fast, easy commissioning
- Latest generation power stage for minimal component count, high reliability and lower thermal losses
- Flexible user interface which retains compatibility
- Low cost and ease of use paramount, providing the customer with a cost-competitive, rapidly commissioned drives solution

### **1.2 Markets and Applications**

- Global market compatibility, supporting key supply voltage ranges
- Conformance with key standards and certification
- Supports multi-ramp control function with at least 3 acceleration ramp and 3 deceleration ramp
- Support for spindle motors / machine applications up to 2kHz output frequency
- Support for single phase supply operation (with automatic derating) across the entire drive range, or DC supply without derating.

## **2. General Specifications**

### **2.1 Input voltage ranges**

Depending upon model and power rating, the drives are designed for direct connection to the following supplies :

200V... 240V  $\pm$  10%, 1ph or 3ph, 50...60 Hz  $\pm$  5%  
380V... 480V  $\pm$  10%, 1ph or 3ph, 50...60 Hz  $\pm$  5%

Note that all 230V S1 products are for connection to 1ph supplies only.  
All 230V S2 products can be supplied with a 1ph or 3ph EMC filter. The 3ph filter variant is intended for connection to 230V 3ph supplies.

Note that for all power ratings above 2.2kW in 230V and all power ratings in 400V operation on a single phase supply results in a 50% derating.

All units have phase imbalance monitoring. A phase imbalance of > 3% will result in the drive tripping.

For input supplies which have supply imbalance greater than 3% (typically the Indian sub- continent & parts of Asia Pacific including China) we will recommend that input line reactors are fitted.

Alternatively, the drives can be operated as a single phase supply drive with 50% derating.

## 2.2 Output Power and Current ratings

The following table relates power ratings to mechanical drive sizes.

### SIZE 1 (INTEGRAL RFI FILTER)

Model	ODG-xxxxx-IN	12037	12075
Motor output rating – industrial 150% o/l	KW	0.37	0.75
Model	ODG-xxxxx-USA	12005	12010
Motor output rating – industrial 150% o/l	HP	0.5	1.0
Supply voltage / phases	V±10%	220-240 / 1Ø	
Supply fuse or MCB 1)	A	6	10
Output voltage / phases	V	0-240V / 3Ø	
Output Amps – industrial 150% overload	A	2.3	4.3
Motor cable size, Copper 75 °C	mm <sup>2</sup>	1.0	
Max motor cable length	m	25	

### SIZE 2 (INTEGRAL RFI FILTER, INTEGRAL BRAKING TRANSISTOR)

Model	ODG-xxxxx-IN	22150	22220
Motor output rating – industrial 150% o/l	KW	1.5	2.2
Model	ODG-xxxxx-USA	22020	22030
Motor output rating – industrial 150% o/l	HP	2	3
Supply voltage / phases	V±10%	220-240 / 1Ø	
Supply fuse or MCB 1)	A	20	30
Output voltage / phases	V	0-240V / 3Ø	
Output Amps – industrial 150% overload	A	7	10.5 (* 9)
Motor cable size, Copper 75 °C	mm <sup>2</sup>	1.5	
Max motor cable length	m	100	
Min brake resistor	Ω	33	22

\* Size 2 230V 3-phase drives are fitted with a 3-phase EMC filter and are therefore different to the 230V 1-phase version.

Model	ODG-xxxxx-IN	24075	24150	24220	24400
Motor output rating – industrial 150% o/l	KW	0.75	1.5	2.2	4.0
Model	ODG-xxxxx-USA	24010	24020	24030	24050
Motor output rating – industrial 150% o/l	HP	1	2	3	5
Supply voltage / phases	V±10%	380-480 / 3Ø			
Supply fuse or MCB 1)	A	6 - 10	10	10	20
Output voltage / phases	V	0-480 / 3Ø			
Output Amps – industrial 150% overload	A	2.2	4.1	5.8	9.5
Motor cable size, Copper 75 °C	mm <sup>2</sup>	1.0		1.5	
Max motor cable length	m	50	100	100	100
Min brake resistor	Ω	47	47	47	33

1) For cUL compliance, use fuse type Bussmann KTN-R / [KTS-R](#) or equivalent

**SIZE 3 (INTEGRAL RFI FILTER, INTEGRAL DC LINK CHOKE & BRAKING TRANSISTOR)**

Model	ODG-xxxxx-IN	32030	32040	32055	32075
Motor output rating – industrial 150% o/l	KW	3.0	4.0	5.5	7.5
Model	ODG-xxxxx-USA	32040	32050	32075	32100
Motor output rating – industrial 150% o/l	HP	4	5	7.5	10
Supply voltage / phases	V±10%	220-240 / 1Ø(with 50% derating) or 3Ø			
Supply fuse or MCB 1)	A	32	32	50	50
Output voltage / phases	V	0-240 / 3Ø			
Output Amps – industrial 150% overload	A	14	18	25 (* 24)	30 **
Motor cable size, Copper 75 °C	mm <sup>2</sup>	2.5	2.5	4	4
Max motor cable length	m	100			
Min brake resistor	Ω	15			

Model	ODG-xxxxx-IN	34055	34075	34110	34150
Motor output rating – industrial 150% o/l	KW	5.5	7.5	11.0	15.0
Model	ODG-xxxxx-USA	34075	34100	34150	34200
Motor output rating – industrial 150% o/l	HP	7.5	10	15	20
Supply voltage / phases	V±10%	380-480 / 1Ø(with 50% derating) or 3Ø			
Supply fuse or MCB 1)	A	32	32	50	50
Output voltage / phases	V	0-480 / 3Ø			
Output Amps – industrial 150% overload	A	14	18	25 (* 24)	30**
Motor cable size, Copper 75 °C	mm <sup>2</sup>	2.5	2.5	4	6
Max motor cable length	m	100			
Min brake resistor	Ω	22			

\* Maximum rating for UL applications

\*\* Models not UL listed

**SIZE 4 (INTEGRAL RFI FILTER, LINE CHOKE & BRAKING TRANSISTOR)**

Model	ODG-xxxxx-IN	44075	42110	42150	42185
Motor output rating – industrial 150% o/l	KW	7.5	11	15	18.5
Model	ODG-xxxxx-USA	44100	42200	42250	42200
Motor output rating – industrial 150% o/l	HP	10	20	25	20
Supply voltage / phases	V±10%	220-240 / 1Ø (with 50% derating) or 3Ø			
Supply fuse or MCB 1)	A	80-100	80-100	80-100	80-100
Output voltage / phases	V	0-240 / 3Ø			
Output Amps – industrial 150% overload	A	39	46	46	46
Motor cable size, Copper 75 °C	mm <sup>2</sup>	10	10	10	10
Max motor cable length	m	100			
Min brake resistor	Ω	6			

Model	ODG-xxxxx-IN	44185	44220	44300	44370
Motor output rating – industrial 150% o/l	KW	18.5	22	30	37
Model	ODG-xxxxx-USA	44250	44300	44400	44500
Motor output rating – industrial 150% o/l	HP	25	30	40	50
Supply voltage / phases	V±10%	380-480 / 1Ø (with 50% derating) or 3Ø			
Supply fuse or MCB 1)	A	80	80-100	100	125
Output voltage / phases	V	0-480 / 3Ø			
Output Amps – industrial 150% overload	A	39	46	61	72
Motor cable size, Copper 75 °C	mm <sup>2</sup>	10	10	16	16
Max motor cable length	m	100			
Min brake resistor	Ω	12			

1) For cUL compliance, use fuse type Bussmann KTN-R / [KTS-R](#) or equivalent



**SIZE 5 (INTEGRAL RFI FILTER, LINE CHOKE & BRAKING TRANSISTOR)**

Model	ODG-xxxxx-IN	52220	52300	52370	52450
Motor output rating – industrial 150% o/l	KW	22	30	37	45
Model	ODG-xxxxx-USA	52300	52400	52500	52600
Motor output rating – industrial 150% o/l	HP	30	40	50	60
Supply voltage / phases	V±10%	220-240 / 1Ø(with 50% derating) or 3Ø			
Supply fuse or MCB 1)	A	160	200	250-300	250-300
Output voltage / phases	V	0-240 / 3Ø			
Output Amps – industrial 150% overload	A	89	110	150	180
Motor cable size, Copper 75 °C	mm <sup>2</sup>	25	35	55	70
Max motor cable length	m	100			
Min brake resistor	Ω	3			

Model	ODG-xxxxx-IN	54450	54550	54750	54900
Motor output rating – industrial 150% o/l	KW	45	55	75	90
Model	ODG-xxxxx-USA	54600	54750	54100	54150
Motor output rating – industrial 150% o/l	HP	60	75	100	150
Supply voltage / phases	V±10%	380-480 / 1Ø(with 50% derating) or 3Ø			
Supply fuse or MCB 1)	A	160	200	250-300	250-300
Output voltage / phases	V	0-480 / 3Ø			
Output Amps – industrial 150% overload	A	90	110	150	180
Motor cable size, Copper 75 °C	mm <sup>2</sup>	25	35	55	70
Max motor cable length	m	100			
Min brake resistor	Ω	6			

**SIZE 6 (EXTERNAL LINE CHOKE, INTEGRAL RFI FILTER & BRAKING TRANSISTOR)**

Model	ODG-xxxxx-IN	62055	62075	62090
Motor output rating – industrial 150% o/l	KW	55	75	90
Model	ODG-xxxxx-USA	62075	62100	62120
Motor output rating – industrial 150% o/l	HP	75	100	120
Supply voltage / phases	V±10%	220-240 / 1Ø(with 50% derating) or 3Ø		
Supply fuse or MCB 1)	A	315-350	400	450-500
Output voltage / phases	V	0-240 / 3Ø		
Output Amps – industrial 150% overload	A	202	240	300
Motor cable size, Copper 75 °C	mm <sup>2</sup>	90	120	170
Max motor cable length	m	100		
Min brake resistor	Ω	3		

Model	ODG-xxxxx-IN	64110	64132	64160
Motor output rating – industrial 150% o/l	KW	110	132	160
Model	ODG-xxxxx-USA	64160	64200	64250
Motor output rating – industrial 150% o/l	HP	160	200	250
Supply voltage / phases	V±10%	380-480 / 1Ø(with 50% derating) or 3Ø		
Supply fuse or MCB 1)	A	315-350	400	450-500
Output voltage / phases	V	0-480 / 3Ø		
Output Amps – industrial 150% overload	A	202	240	300
Motor cable size, Copper 75 °C	mm <sup>2</sup>	90	120	170
Max motor cable length	m	100		
Min brake resistor	Ω	6		

1) For cUL compliance, use fuse type Bussmann KTN-R / [KTS-R](#) or equivalent

### 2.3 **Self Protection features**

The range of drives can detect and shut down in the event of the following fault conditions arising :

- Phase - Phase short circuit
- Phase - Earth short circuit
- Output phase over-current trip
- Output current thermal overload ( $I^2t$ )
- Brake resistor short circuit
- Brake resistor thermal overload ( $I^2t$ )
- Heatsink thermal overload (trip > 97 °C)
- Heatsink thermal underload (trip < 0 °C)
- DC Link Over voltage
- DC Link Under voltage
- Input phase loss protection (for 3 phase input unit)
- Input phase imbalance protection (for 3 phase input unit)

### 2.4 **Conformance**

All products conform to the following international standards :

- EN 61800-5-1 Adjustable speed electrical power drive systems
- EN 61800-3 EMC product standard for Variable speed drive systems
- EN 55011 Limits and Methods of measurement of radio interference characteristics of Industrial Equipment
- UL 508C Power Conversion equipment
- Enclosure protection rating according to NEMA 250, EN 60529
- Flammability rating according to UL 94

### 2.5 **Environmental**

Ambient temperature range	- Operational	: 0 ... 50 °C
Without derating the drive	- Storage	: -40 °C ... 60 °C
Max altitude for rated operation		: 1000m
Derating above 1000m (to 4000m max)		: 1% / 100m
Relative Humidity		: < 95% (non condensing)
Protection rating		: IP20, NEMA 0

### 2.6 **EMC**

Immunity :	EN 61000-6-2, industrial level
Radiated Emissions :	EN 61000-6-3 /-4, industrial, domestic levels
Conducted Emissions :	EN 61000-6-3 /-4, Drives with 1ph supplies : domestic (class B) to 1m Drives with 3ph supplies : industrial (class A) to 1m

Conducted emissions limits apply only when optional RFI filter fitted inside drive  
A range of foot mounted EMC filters will be available for sizes #1 to #3.

With the foot-mounted EMC filter fitted, the drive will meet the industrial standard with up to 25m of screened motor cable at rated switching frequency.

## 2.7 *Physical Dimensions*

The following dimensions apply to the standard units, as factory supplied.

Size 1 :	155 x 80 x 130	(L x W x D)	
Size 2 :	260 x 100 x 175	(L x W x D)	
Size 3 :	260 x 171 x 175	(L x W x D)	
Size 4 :	520 x 340 x 220	(L x W x D)	
Size 5 :	1045 x 340 x 220	(L x W x D)	45kW
Size 5 :	1100 x 340 x 330	(L x W x D)	55kW to 90kW
Size 6 :	1100 x 340 x 330	(L x W x D)	

### **3. Design Specifications**

#### **3.1 User interface**

##### *3.1.1 Keypad*

Each unit will have a keypad fitted as standard, allowing drive operation and set up without any further equipment.

The keypad will consist of 5 keys with the following functions :

Start / Run	: Enable running of motor
Stop / Reset	: Stop motor / Reset trip
Navigate	: Function key to enter / exit parameter edit mode
Up	: Increase Parameter / Value
Down	: Decrease Parameter / Value

The Start/Stop buttons on the keypad can be disabled by appropriately configuring the drive, if required.

##### *3.1.2 Display*

A standard 5-digit 7-segment display is fitted to each drive to allow drive operation to be monitored and parameters to be set.

Access to parameters and modifying their values is based on the existing easy-to-use concept, thereby minimising commissioning time.

##### *3.1.3 IrDA communications*

An optional hand-held PDA commissioning module is available which communicates with the drive via an IrDA compliant communication link. All parameters and operating modes are displayed in plain text. Parameter sets can be read into the PDA-trAC and transferred to other drives as required. The PDA-trAC will be able to store an unlimited number of parameter sets, limited only by the size of the PDA memory. Each parameter set can be given a descriptive filename for easy identification.

For more details, see section 3.4

##### *3.1.4 RS485 communications*

ODP-W has integrated RS-485 communication interface, which supports the Optibus Plus communication protocol. All signals can be accessed through a RJ11 connector which is mounted on the surface of drive control panel.

For more details, see section 3.4

## 3.2 **Motor control module interface**

### 3.2.1 *Hardware requirements*

The motor control core is DSP based and is referenced to minus DC bus potential (-ve). This motor control core handles the power stage in its entirety, from input voltage monitoring to power stage IGBT control.

The User interface is handled by a separate microcontroller, referenced to the user 0V brought out via the User terminal strip. The two microcontrollers are linked via a high speed 2-wire, optically isolated serial interface.

### 3.2.2 *Key features in implementation of motor control core*

Key features are listed below:

- Motor control needs only motor nameplate data (typically rated frequency, rated speed, rated voltage, rated current) for optimum performance.
- Auto-tune function to optimise drive parameters
- On-line continuous parameter adaptation to maintain performance
- Spin start onto spinning motor – both forwards & reverse
- 3 pair ramp control plus an extra deceleration ramp.
- Output frequency range from 0.1Hz to 2kHz (assume PRF  $\geq$  8x output frequency).
- Maximum motor frequency up to 5x base frequency ( $F_0$ )
- Brake channel control
- Analog output supporting voltage (0-10V) and current (4-20mA) modes
- Optical (IrDA) communications operating at 115kbps
- RS-485 communication up to 115kbps
- Real-time display of Power, speed and current
- Run-time clock and kWh meters

### 3.3 User terminals

#### 3.3.1 Power terminals, earthing and screening

The full range of products will have power input at the top of the unit and motor connection at the bottom. In addition, sizes 2 and above will have connection for an external braking resistor next to the motor connections.

The earth connection will be made directly to the heatsink, thereby earthing the heatsink and forming a low impedance path between motor earth and supply earth which by-passes the PCBs.

There will be provision for an earthing bracket which connects directly to the heatsink and allows optimal, direct motor screen connections.

#### 3.3.2 Low power control terminals

Terminal	Description
1	User 24V output, 100mA current limited. Internally connected to terminal 5.
2	Digital input (+ve logic only)
3	Digital input (+ve logic only) Second 24V digital output, current limited, max load 5mA.
4	Digital input (+ve logic only), second analog input (0..10V, 0..24V, 4..20mA), motor thermistor input.
5	User 24V output, 100mA current limited. Internally connected to terminal 1.
6	Bipolar analog input, +/- 10V or 0..24V configurable. Resolution = 12-bit + sign. Symmetry error < 0.1%.
7	User 0V
8	Analog output. Configurable as 0..10V, 4..20mA with up to 20mA drive capability or as a 24V digital output with 20mA drive capability
9	User 0V
10	Programmable relay contact (N.O.) - can be inverted via software
11	Programmable relay contact (N.O.) - can be inverted via software

Notes :

- All digital inputs are positive logic only with logic levels defined as follows :  
 "Logic 1" input voltage range 8V..30V DC.  
 "Logic 0" input voltage range 0V..4V DC.

A switch between terminal 1 (+24V output) and each digital input will activate that input. The digital inputs are sampled once per 8ms.

- The 3<sup>rd</sup> digital input duals as a second analog input (unipolar) which has a 11-bit resolution (for v1.04 or later) and supports both voltage and current

formats. This input can also be configured as a motor thermistor input. The second analog input is sampled once per 16ms

- The bipolar analog input can be used as a +/-10V input or as a 0..24V input. This supports direct connection of a potentiometer (2k2) using the SW2 +24V output. The resolution is 12-bit + sign. The bipolar analog input is sampled at once per 16ms.
- The analog output supports voltage (0..10V) and current formats (0..20mA, 4..20mA). The output can also be configured as a 24V output. The output can source up to 20mA and is short circuit proof. The analog output has an 8-bit resolution and is updated once per 16ms.
- The relay contacts are N.O. and can be configured to close on conditions as programmed into the SW2. The functions can be inverted to effectively give N.C. contacts (excluding drive power down). The relay contacts are rated at 250V AC / 30V DC @ 5A.

### **3.4 Serial communications & optional fieldbus gateway**

#### *3.4.1 IRDA communications*

A serial communications interface operating at 115kbps will be available using IrDA technology (IrDA 1.0 compliant) for communications with the Optiwand CE Plus or to a standard PC via the IR adapter.

The interface will allow access to all parameters for drive set-up and monitoring during operation.

The communication protocol will allow individual drives to be addressed, thus allowing communication with any one of an array of drives. Up to 63 drive addresses will be available.

The drive address can be set via the keypad and display.

Three levels of error detection / data verification will be implemented in the protocol to effectively eliminate the risk of erroneous data transfer. For more information about the protocol, please contact INVERTEK DRIVE LTD.

The mechanical design of the drive will make provision for an optical link to an optional external communications interface module. This will facilitate communications based on RS232 and RS485.

A remote keypad will be supported that is powered from the SW2 directly.

The communications protocol will support multiple master operation (up to 4 master units per network).

In master/Slave operation mode, the master will send out its speed and torque reference information once every 20ms. All slave drives in the network will use these two references for their operation as configured.


The Optibus Plus protocol enables the user to use different peripherals to communicate with the drive at the same time. For example, the user can use OptiwandCE Plus, OptistoreCE Plus and the OptiPort Plus (remote keypad) with the same drive at the same time. Communication cycle time for any external peripherals is 60ms.

#### *3.4.2 RS-485 communications*

Apart from IRDA data link, all drives have an extra RJ11 connector on the front of the control panel. This connector will enable user to set up a drive network via wire connection.

The electrical signal arrangement of the RJ11 connector shows as follows:



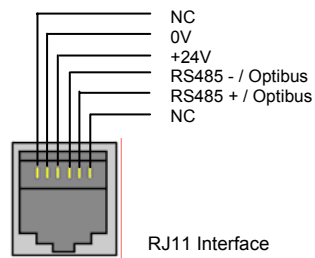

For the Optibus data link uses the same communication protocol as used by IRDA communication. In other words, user can set up a drive network either by using Infrared data link or by wire link or both of them.

However, when using master/slave operation with IRDA link, maximum two slaves can be connected with the master drive.

If user wants to setup a master slave network with more than 3 drives, then they should use RS485 wire link. In this case, user can connect up to 62 slaves with one master drive.

#### 4. *Parameter definitions and access*

Accessing and changing parameters is done in an intuitive manner, as described below :

Normal (real-time) display mode (non parameter edit mode) allows the key variables listed below to be displayed in real time.

H	Frequency	0 ... ±2000	Hz
A	Motor current	0 ... 1000	A
P	Drive input power	0 ... max power	kW
*	Speed (rpm)	0 ... ±60,000	rpm
*	C	Scaled value	

\* Only visible when activated


The user can scroll between these variables by pressing and releasing the <Navigate> key within 1s. The scrolling mechanism rolls over from Scaled Value back to speed.

To enter parameter access mode, press the < Navigate > button for approx 1s. The display changes from indicating operational speed to "PY-XX", where Y represents the parameter group number and XX represents the parameter last accessed during the previous commissioning session. The value of XX can be incremented or decremented using the <up> / <down> keys. The parameter scrolling mechanism rolls over from one group to the next if extended access has been enabled using P1-14.

Pressing and releasing the <Navigate> key once more will then display the current value of the selected parameter. This can then be edited within the limits of that parameter, unless parameter lock has been enabled (P2-38).

Pressing the <Navigate> key once more toggles back to display the parameter number in case further editing is required. If the <Navigate> key is held for approx. 1 second, the display reverts to displaying the real-time values (speed/freq or current/load). The display will also revert to displaying the selected real-time value if no buttons are pressed for >60s .

The operation of the parameters is illustrated by the following diagram :

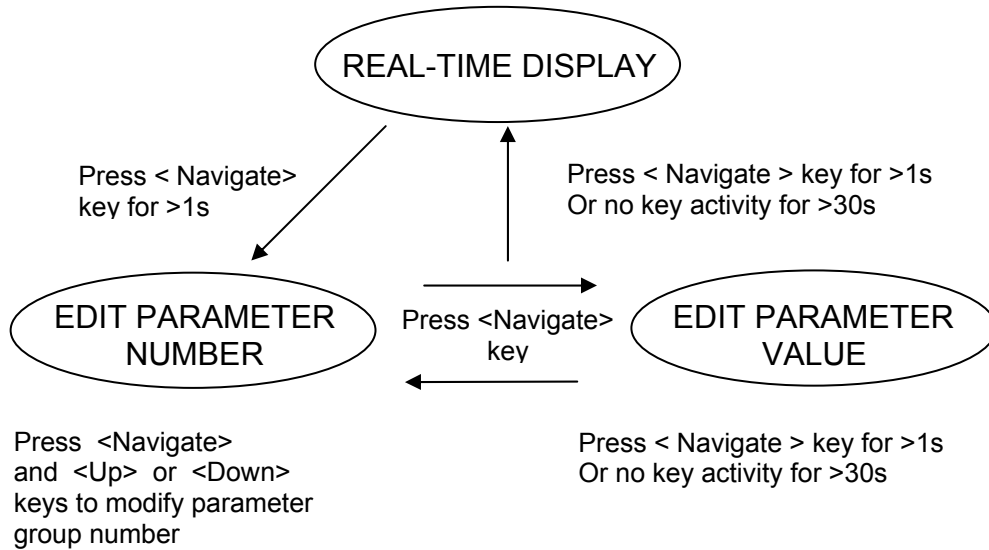

The parameters are split into standard parameters (eg max / min speed) accessible in the basic menu (Parameter Group 1) and extended parameters accessible in the extended menu (Parameter Group 2).

Parameter Group 3 is used for User PID applications

Parameter Group 4 is used for Auto-tuning

The parameter listings with default and limiting values are shown in the following tables.

## 4.1 Parameter set overview

### Basic parameter set

<b>Par</b>	<b>Description</b>	<b>Range</b>	<b>Default</b>
P1-01	Max speed limit (Hz or rpm)	P1-02 to P1-09 x 5. Max value 2000Hz / 60,000 rpm	50Hz (60Hz)
P1-02	Min speed limit (Hz or rpm)	0 to P1-01	0Hz
P1-03	Accel ramp time (s)	0s ... 3000s	5s
P1-04	Decel ramp time (s)	0s ... 3000s	5s
P1-05	Stop mode select	0 : Ramp to stop (mains ride thro) 1 : Coast to stop 2 : Ramp to stop (Fast-Stop mode)	0
P1-06	Energy Optimisation	0: Disable 1: Enable	0
P1-07	Motor rated voltage	20V to 250V 20V to 500V	230V 400V (460V)
P1-08	Motor rated current (rms)	20% to 100% of drive current rating (Amps)	Drive rating (Amps)
P1-09	Motor rated frequency	25 to 2000Hz	50 Hz (60Hz)
P1-10	Motor rated speed	0 to 60,000 rpm	0
P1-11	Preset speed 1	-P1-01 (min) to P1-01 (max)	50 Hz (60Hz)
P1-12	Terminal / Keypad control of drive	0 : Terminal control 1 : Keypad control (fwd only) 2 : Keypad control (fwd / rev toggle using start button)	0 (terminal)
P1-13	Trip log	Last four trips stored	No fault
P1-14	Extended menu access code	0 to 30000. When in default state, set to 101 to access extended menu	0

Default parameter values for Horse Power rated drives are shown in brackets

**Extended parameter set**

<b>Par</b>	<b>Description</b>	<b>Range</b>	<b>Default</b>
P2-01	Digital inputs function select	0 ... 22(see table on page 24)	0
P2-02	Preset speed 2	-P1-01 (min) to P1-01 (max)	0 Hz / rpm
P2-03	Preset speed 3	-P1-01 (min) to P1-01 (max)	0 Hz / rpm
P2-04	Preset speed 4	-P1-01 (min) to P1-01 (max)	0 Hz / rpm
P2-05	Preset speed 5	-P1-01 (min) to P1-01 (max)	0 Hz / rpm
P2-06	Preset speed 6	-P1-01 (min) to P1-01 (max)	0 Hz / rpm
P2-07	Preset speed 7	-P1-01 (min) to P1-01 (max)	0 Hz / rpm
P2-08	Preset speed 8	-P1-01 (min) to P1-01 (max)	0 Hz / rpm
P2-09 *	Skip frequency	P1-02 (min) to P1-01 (max)	0 (inactive)
P2-10 *	Skip frequency band	0 (min) to P1-01 (max)	0 (inactive)
P2-11	Analog output function select	(Digital output mode) 0: Drive enabled 1: Drive healthy 2: Motor at target speed 3: Motor speed > 0 4: Motor speed > limit 5: Motor current > limit 6: 2nd analog input > limit  (Analog output mode) 7: Motor speed 8: Motor current 9: Motor power (kW)	7
P2-12 (h)	Digital output control high limit	Speed : 0..100% (100% = max speed) Current : 0..200% (100% = rated current) PID feedback : 0..100% (100% = max 2 <sup>nd</sup> analog input)	100%
P2-12 (L)	Digital output control low limit	0 ... P2-12(h)	100%
P2-13	Relay output function	0: Drive Enabled 1: Drive healthy 2: Motor at target speed 3: Motor speed > 0 4: Motor speed > limit 5: Motor current > limit 6: 2nd Analog in > limit	1
P2-14 (h)	User relay output control high limit	Speed : 0..100% (100% = max speed) Current : 0..200% (100% = rated current) PID feedback : 0..100% (100% = max 2 <sup>nd</sup> analog input)	100%
P2-14 (L)	User relay output control low limit	0 ... P2-14(h)	100%
P2-15	Relay output mode	0 : N.O.      1 : N.C.	0
P2-16	Zero speed holding time	0, 0.1 to 9.9s, 10s to 60s	0.2s
P2-17	Start mode select	Edge-r,    Auto-0...Auto-5	Auto-0
P2-18	Spin start enable	0: Disable      1: Enable	0

P2-19	Keypad restart mode	0 : Minimum speed 1 : previous speed 2 : Min-speed (Auto-r) 3 : prev. speed (Auto-r)	1
P2-20	Enable standby mode	0 : Disable, 1s...250s delay	0
P2-21	Display scaling factor	0.000 to 30.000	0 (disable)
P2-22	Display scaling source	0 : 2 <sup>nd</sup> analog input 1 : Speed	0
P2-23	Brake circuit enable	0 : Disable 1 : Enable + low braking power 2 : Enable + high braking power 3 : Enable + no protection	0
P2-24	Effective switching frequency	S1, S2 230V : 4..32kHz S2 400V : 4..32kHz S3 400V : 4..24kHz S4 400V : 4..24kHz S5* 400V : 4..16kHz S6* 400V : 4..16kHz *: maximum switching frequency depends on power rating	16 kHz 8 kHz 4 kHz 4 kHz 4 kHz 4 kHz
P2-25	Second Decel ramp time (s)	0s ... 3000s	30s
P2-26	<i>Reserved</i>	0	0
P2-27	Drive comms address	0 (disable), 1..63	1
P2-28	Master / Slave mode select	0 : Slave mode 1 : Master mode	0
P2-29	Digital speed reference preset scaling factor	0..500%, steps of 0.1%	100%
P2-30	Bipolar an input format	0..24V, 0..10V, -10..10V	0..24V
P2-31	Bipolar an input scaling	0..500.0%	100.0%
P2-32	Bipolar an input offset	-500.0%..500.0%, steps of 0.1%	0%
P2-33	2 <sup>nd</sup> an input format	0 / 24V, 0..10V, 4..20mA, 0..20mA	0..10V
P2-34	2 <sup>nd</sup> an input scaling	0..500.0%	100.0%
P2-35	Digital speed reference scaling control	0 : Disabled (no scaling) 1 : Scaling set by preset value in P2-29 2 : Slave speed scaled by preset value in P2-29, then bipolar analog input added as offset 3 : Slave speed scaled by preset value in P2-29 <i>and</i> by bipolar analog input	0
P2-36	Analog output format	0..10V, 4..20mA, 10..0V, 20..4mA	0..10V
P2-37	Extended Parameter access code	0 ... 9999	101
P2-38	Parameter lock	0 : Unlocked 1 : Locked	0
P2-39	Hours run meter	0h 0mins to 65535 hours	Read only
P2-40	Drive type / rating	" 0.37", "0 230" : 3 <sup>GV</sup> 230V 0.37kW "HP 20", "1 460" : VTC, 460V 20HP	Read only

\*Skip freq hysteresis used automatically for User PID control. For normal run, no hysteresis

**Advanced parameter set - PID control**

<b>Par</b>	<b>Description</b>	<b>Range</b>	<b>Default</b>
P3-01	Acc ramp speed set point 1	0.0%...100.0%	0.0%
P3-02	Acc ramp 1	0.0s...3000s	5.0s
P3-03	Acc ramp speed set point 2	0.0%...100.0%	0.0%
P3-04	Acc ramp 2	0.0s...3000s	5.0s
P3-05	Dec ramp speed set point 1	0.0%...100.0%	0.0%
P3-06	Dec ramp 1	0.0s...3000s	5.0s
P3-07	Dec ramp speed set point 2	0.0%...100.0%	0.0%
P3-08	Dec ramp 2	0.0s...3000s	5.0s
P3-09	<i>Reserved</i>		
P3-10	<i>Reserved</i>		

**Vector control parameter set**

<b>Par</b>	<b>Description</b>	<b>Range</b>	<b>Default</b>
P4-01	Control mode	0: Speed control (vector) 1: Torque control (vector) 2: Speed control (V/F)	2
P4-02	Motor parameter auto-tune	0 : Disable 1 : Enable	0
P4-03	Speed controller Proportional Gain	0 ... 4096 (internal value)	1000
P4-04	Speed controller Integral time constant	0.000 ... 1.000s	0.05s
P4-05	Speed controller filter time constant	0.001 ... 0.100s	0.005s
P4-06	Torque reference select	0 : Preset value 1 : Bipolar analog input 2 : 2 <sup>nd</sup> analog input	0
P4-07	Torque reference preset value	0 ... 200%	200%
P4-08	Minimum torque reference limit	0...150%	0
P4-09	V/F characteristic adjustment frequency	0 ... P1-09	0.0Hz
P4-10	V/F characteristic adjustment voltage	0 ... P1-07	0

**Motor parameters (Hidden)**

<b>Par</b>	<b>Description</b>	<b>Range</b>	<b>Default</b>
P5-01	Motor Stator resistance (Rs)	Drive dependent	Rating dependent
P5-02	Motor Rotor resistance (Rr)	Drive dependent	Rs
P5-03	Stator inductance (Ls)	Drive dependent	Rating dependent
P5-04	Magnetising current (Id rms)	10% to 80% of motor rated current	Rating dependent
P5-05	Cos phi	0.50 to 0.99	Rating dependent
P5-06	Leakage coefficient (sigma)	0.025 to 0.250	0.100
P5-07	Quick Rs measurement Enable	0: Disable 1: Enable	1
P5-08	Parameter adaptation	0: Disable 1: Enable	1
P5-09	Rotor speed feed back control En	0: Disable 1: Enable	1
P5-10	Regen current limit	5%...200%	100%
P5-11	Pulse width limitation	0...500 (Time = value *16.67ns)	Drive dependent
P5-12	V/F mode magnetising period	0...2000ms	Rating dependent

**Application Specific parameter set (Hidden)**

<b>Par</b>	<b>Description</b>	<b>Range</b>	<b>Default</b>
P6-01	Software upgrade enable	0 : Disable 1 : I/O En 2 : DSP En	0
P6-02	Thermal management enable	0 : Disable 1 : Enable	0
P6-03	Auto-reset delay time	1s...60s	20s
P6-04	Relay speed hysteresis	0.0 ... 25.0%	0.3
P6-05	Hoist function boost speed	0 ... 10.0%	0
P6-06	Boost speed holding time	0.1 ... 5.0s	0.4s
P6-07	Minimum integral error	0...20.0%	0
P6-08	Terminal function 5, digital input ramp select function	0: Disable 1: Enable	Disable



**Calibration parameters (restricted access)**

<i>Par</i>	<i>Location</i>	<i>Description</i>	<i>Range</i>	<i>1<sup>st</sup> power up default</i>
P7-01	I/O uC	Error count for I/O RX comms	0 ... 255 (read only)	0
P7-02	I/O uC	Error count for IrDA comms	0 ... 255 (read only)	0
P7-03	I/O uC	Scaling factor for bipolar analog input	50 .. 200%	100.0%
P7-04	I/O uC	Offset correction for bipolar analog input	-25 .. 25	0
P7-05	I/O uC	Symmetry for bipolar analog input	50 ... 150%	100.0%
P7-06	I/O uC	Scaling factor for second analog input	50 .. 200%	103.0%
P7-07	I/O uC	Offset correction for second analog input	-125 .. 125	0
P7-08	I/O uC	Scaling factor for second analog current input	0...200.0%	102.4%
P7-09	I/O uC	Scaling factor for analog output – 0..10V	0 ... 255	235
P7-10	I/O uC	Offset correction for analog output – 0..10V	-125 .. 125	0
P7-11	I/O uC	Scaling factor for analog output – 4..20mA	0 ... 255	180
P7-12	I/O uC	Offset correction for analog output – 4..20mA	-125 .. 125	-2
P7-13	I/O uC	Scaling factor for analog output – 0 / 24V	0 ... 255	215

These parameters are only available during drive production and are used to calibrate the drive hardware.

These parameters are unaffected by setting parameter defaults or any other parameter changes within the drive.

## Drive real-time parameters (read-only watch windows)

<b>Par</b>	<b>Description</b>	<b>Display Range</b>	
P0-01	Bipolar an input value	-100.0 ..100.0%	
P0-02	2 <sup>nd</sup> analog input value	0...100.0%	
P0-03	Speed controller reference	-100.0 ..100.0%	
P0-04	Digital speed ref (digi pot)	- P1-01 ... P1-01 / Hz	
P0-05	Torque controller reference	0...100.0%	
P0-06	<i>Reserved</i>		
P0-07	<i>Reserved</i>		
P0-08	<i>Reserved</i>		
P0-09	<i>Reserved</i>		
P0-10	<i>Reserved</i>		
P0-11	<i>Reserved</i>		
P0-12	<i>Reserved</i>		
P0-13	Motor voltage		
P0-14	Magnetising current (Id)	A (rms)	
P0-15	Rotor current (Iq)	A (rms)	
P0-16	Field strength	0..100% (100% is rated Id)	
P0-17	Stator resistance (Rs)	Ohm	
P0-18	Stator inductance (Ls)	H	
P0-19	Rotor resistance (Rr)	Ohm	
P0-20	DC bus voltage	V dc	
P0-21	Drive temperature	Degrees C (calculated)	
P0-22	Supply voltage L1	V rms	
P0-23	Supply voltage L2	V rms	
P0-24	Supply voltage L3	V rms	
P0-25	Rotor speed	Hz	
P0-26	kWh meter	0.0 ... 999.9 kWh	
P0-27	MWh meter	0.0 ... 65535 MWh	
P0-28	Software I.D. I/O processor	Eg " 1.00", " 4F3C"	
P0-29	Software I.D. Motor control	Eg " 1.01", " 7A4E"	
P0-30	Drive Serial number	000000 ... 000000 (SN grp 1) 000-00 ... 999-99 (SN grp 2, 3)	Fixed in prod'n
<i>P0-31</i>	<i>Drive serial number #2</i>		
<i>P0-32</i>	<i>DSP bootloader version</i>	<i>Eg " 1.00"</i>	
<i>P0-33</i>	<i>Measured Cos phi</i>	<i>Eg 0.78</i>	
<i>P0-34</i>	<i>Comms error count (DSP)</i>	<i>0 ... 65535</i>	
<i>P0-35</i>	<i>Configuration register value</i>	<i>Internal value</i>	
<i>P0-36</i>	<i>Digital input status</i>	<i>Internal value</i>	
<i>P0-37</i>	<i>Analog out internal value</i>	<i>Internal value</i>	
<i>P0-38</i>	<i>Current Phase U offset</i>	<i>Internal value</i>	
<i>P0-39</i>	<i>Current Phase U ref</i>	<i>Internal value</i>	
<i>P0-40</i>	<i>Current Phase V offset</i>	<i>Internal value</i>	
<i>P0-41</i>	<i>Current Phase V ref</i>	<i>Internal value</i>	
<i>P0-42</i>	<i>Brake resistor max on time</i>	<i>Time in milliseconds</i>	
<i>P0-43</i>	<i>Brake resistor duty cycle</i>	<i>Internal value</i>	
<i>P0-44</i>	<i>Uq internal ref value</i>	<i>Internal value</i>	
<i>P0-45</i>	<i>Ud internal ref value</i>	<i>Internal value</i>	
<i>P0-46</i>	<i>Measured spin start speed</i>	<i>Internal value</i>	
<i>P0-47</i>	<i>Calculated slip speed value</i>	<i>Internal value</i>	
<i>P0-48</i>	<i>Hoist boost speed</i>	<i>Internal value</i>	
<i>P0-49</i>	<i>Rated Iq internal value</i>	<i>Internal value</i>	
<i>P0-50</i>	<i>Motor voltage</i>	<i>V ph-ph (rms)</i>	
<i>P0-51</i>	<i>Switching frequency internal</i>	<i>Internal value</i>	
<i>P0-52</i>	<i>Speed hysteresis value</i>	<i>Internal value</i>	

**Digital inputs : Terminal mode**

The following table defines the functions of the digital inputs when in terminal mode, depending of the value of parameter P2-01 (Digital input function select).

P2-01	Digi input 1 function	Digi input 2 function	Digi input 3 function	Analog input function	
0	O : Stop (Disable) C : Run (Enable)	O : Bipolar analog input C : Preset speed 1, 2	O : Preset speed 1 C : Preset speed 2	Bipolar analog input	
1	O : Stop (Disable) C : Run (Enable)	O : Preset speed 1 C : Preset speed 2	O : Preset speed 1, 2 C : Preset speed 3	O : Preset speed 1,2,3 C : Preset speed 4	
2	O : Stop (Disable) C : Run (Enable)	<b>Digi input 2</b>	<b>Digi input 3</b>	<b>Analog input</b>	<b>Preset value</b>
		Open	Open	Open	Preset speed 1
		Closed	Open	Open	Preset speed 2
		Open	Closed	Open	Preset speed 3
		Closed	Closed	Open	Preset speed 4
		Open	Open	Closed	Preset speed 5
		Closed	Open	Closed	Preset speed 6
		Open	Closed	Closed	Preset speed 7
Closed	Closed	Closed	Preset speed 8		
3	O : Stop (Disable) C : Run (Enable)	O : Forward C : Reverse	O : Bipolar analog input C : Preset speed 1	Bipolar analog input	
4	O : Stop (Disable) C : Run (Enable)	O : Forward C : Reverse	2 <sup>nd</sup> Analog Input (eg varies torque limit)	Bipolar analog input	
5	O : Stop (Disable) C : Run (Enable)	O : Forward C : Reverse	<b>Digi input 3</b>	<b>Analog input</b>	<b>Preset value</b>
			Open	Open	Preset speed 1
			Closed	Open	Preset speed 2
			Open	Closed	Preset speed 3
Closed	Closed	Preset speed 4			
6 <sup>2)</sup>	O : Stop (Disable) C : Run (Enable)	O : Forward C : Reverse	External trip input : O : Trip C : OK	Bipolar analog input	
7	O : Stop (Disable) C : Run Forward	O : Stop (Disable) C : Run Reverse	O : Bipolar analog input C : Preset speed 1	Bipolar analog input	
8 <sup>2)</sup>	O : Stop (Disable) C : Run Forward	O : Stop (Disable) C : Run Reverse	O : Preset speed 1 C : Bipolar analog input	Bipolar analog input	
9	O : Stop (Disable) C : Run Forward	O : Stop (Disable) C : Run Reverse	<b>Digi input 3</b>	<b>Analog input</b>	<b>Preset value</b>
			Open	Open	Preset speed 1
			Closed	Open	Preset speed 2
			Open	Closed	Preset speed 3
Closed	Closed	Preset speed 4			
10 <sup>2)</sup>	O : Stop (Disable) C : Run Forward	O : Stop (Disable) C : Run Reverse	External trip input : O : Trip C : OK	Bipolar analog input	
11	O : Stop (Disable) C : Run (Enable)	O : Bipolar analog input C : Preset speed 1	External trip input : O : Trip C : OK	Bipolar analog input	
12 <sup>2)</sup>	O : Stop (Disable) C : Run (Enable)	O : Preset speed 1 C : Bipolar analog input	External trip input : O : Trip C : OK	Bipolar analog input	
13	Normally Open (NO) Momentarily Close to Run	Normally Closed (NC) Momentarily Open to Stop	O : Bipolar analog input C : Speed Preset 1	Bipolar analog input	
14	Normally Open (NO) Momentarily Close to Run Forward	Normally Closed (NC) Momentarily Open to Stop	Normally Open (NO) Momentarily Close to Run Reverse	Bipolar analog input	
15	O : Stop (Disable) C : Run (Enable)	O : Forward C : Reverse	O : Decel ramp 1 C : Decel ramp 2	Bipolar analog input	
16	O : Stop (Disable) C : Run (Enable)	O : Forward C : Reverse	O : Decel ramp 1 C : Decel ramp 2	O : Preset speed 1 C : Preset speed 2	
17	Normally Open (NO) Momentarily Close to Run Forward	Normally Closed (NC) Momentarily Open to Stop	Normally Open (NO) Momentarily Close to Run Reverse	O : Preset speed 1 C : Keypad mode	
18	O : Stop (Disable) C : Run (Enable)	<b>Digi input 2</b>	<b>Digi input 3</b>	<b>Preset value</b>	O : Terminal mode C : Keypad mode
		Open	Open	Preset speed 1	
		Closed	Open	Preset speed 2	
		Open	Closed	Preset speed 3	
Closed	Closed	Preset speed 4			
19	O : Stop (Disable) C : Run (Enable)	O : Bipolar Analog input C : 2nd Analog input	2 <sup>nd</sup> Analog input	Bipolar analog input	
20 <sup>1)</sup>	O : Stop (Disable) C : Run (Enable)	2 <sup>nd</sup> digital output : Drive healthy = +24V	O : Bipolar analog input C : Preset speed 1	Bipolar analog input	
21 <sup>1)</sup>	O : Stop (Disable) C : Run (Enable)	2 <sup>nd</sup> digital output : Drive healthy = +24V	O : Forward C : Reverse	Bipolar analog input	
22 <sup>1)</sup>	O : Stop (Disable) C : Run (Enable)	2 <sup>nd</sup> digital output : Drive healthy = +24V	External trip input : O : Trip C : OK	Bipolar analog input	

**Notes :**

- 1) When P2-01 = 20, 21 or 22, the 2<sup>nd</sup> digital input is configured as an output, which outputs +24V when the drive is healthy, otherwise 0V
- 2) When connecting a motor thermistor, connect between terminals 1 & 4, set P2-01 = 6, 10, 11, 12 or 22 (Uses external trip input)

**Digital inputs : Keypad mode**

The following table defines the functions of the digital inputs when in keypad mode, depending of the value of parameter P2-01 (Digital input function select).

P2-01	Digi input 1 function	Digi input 2 function	Digi input 3 function	Additional information	
0 <sup>1)</sup>	O : Stop (Disable) C : Run (Enable)	Closed : Remote pushbutton UP	Closed : Remote pushbutton DOWN	When drive is stopped, closing digital inputs 2 & 3 together starts drive. Bipolar analog input has no effect	
1	O : Stop (Disable) C : Run (Enable)	Closed : Remote pushbutton UP	External trip input : O : Trip C : OK	Closed : Remote pushbutton DOWN	
2	O : Stop (Disable) C : Run (Enable)	Closed : Remote pushbutton UP	O : Digital speed ref C : Preset speed 1	Bipolar analog input > 5V reverses rotation	
<sup>1)</sup> 3..10, 13,14, 16	O : Stop (Disable) C : Run (Enable)	Closed : Remote pushbutton UP	Closed : Remote pushbutton DOWN	When drive is stopped, closing digital inputs 2 & 3 together starts drive. Bipolar analog input > 5V reverses rotation	
11	O : Stop (Disable) C : Run (Enable)	O : Digital speed ref C : Preset speed 1	External trip input : O : Trip C : OK	Allows connection of motor thermistor. Bipolar analog input > 5V reverses rotation	
12	O : Stop (Disable) C : Run (Enable)	O : Preset speed 1 C : Digital speed ref	External trip input : O : Trip C : OK	Allows connection of motor thermistor. Bipolar analog input > 5V reverses rotation	
15	O : Stop (Disable) C : Run (Enable)	O : Digital speed ref C : Preset speed 1	O : Decel ramp 1 C : Decel ramp 2	Bipolar analog input > 5V reverses rotation	
17	O : Stop (Disable) C : Run (Enable)	O : Digital speed ref C : Bipolar analog input	O : Digital / Analog ref C : Preset speed 1	Analog speed reference	
18	O : Stop (Disable) C : Run (Enable)	O : Digital speed ref C : Preset speed	<b>Digi input 3</b>	<b>Analog input</b>	<b>Preset value</b>
			Open	Open	Preset speed 1
			Closed	Open	Preset speed 2
			Open	Closed	Preset speed 3
Closed	Closed	Preset speed 4			
19	O : Stop (Disable) C : Run (Enable)	O : Digital speed ref C : 2nd analog input	No effect	No effect	
20,21	O : Stop (Disable) C : Run (Enable)	2 <sup>nd</sup> digital output : Drive healthy = +24V	O : Digital speed ref C : Speed Preset 1	Bipolar analog input > 5V reverses rotation	
22	O : Stop (Disable) C : Run (Enable)	2 <sup>nd</sup> digital output : Drive healthy = +24V	External trip input : O : Trip C : OK	Bipolar analog input > 5V reverses rotation	

**Notes:**

- 1) In addition to the speed being set using the pushbuttons on the front of the drive, these settings for P2-01 allow the speed to be controlled remotely using remote pushbuttons connected to digital inputs 2 and 3.
- 2) When P2-19 = 2 or 3 in keypad mode, the drive START and STOP is controlled from the hardware enable input (terminal 2). In this case, the START / STOP buttons will have no effect.
- 3) Reverse rotation control using the analog input only works in keypad mode. If P1-12=1, the rotation control only works when P2-19 = 2 or 3. If P2-35 = 2 or 3, the function is disabled.
- 4) When connecting a motor thermistor, connect between terminals 1 & 4, set P2-01 = 6, 10, 11, 12 or 22 (Uses external trip input)

## 4.2 *Parameter functional descriptions*

### Group 1: Basic Parameter set

#### **P1-01 Maximum Speed Limit**

This parameter sets the upper limiting boundary defining the maximum frequency (speed) that can be applied to the motor in any mode of operation.

This parameter will be displayed in Hz in the factory default state or whenever the motor rated speed parameter (P1-10) is zero. If the motor rated speed in rpm has been entered into P1-10, this parameter will be displayed in rpm.

Maximum value: 5 x base frequency (i.e. 5 x P1-09) \*  
Minimum value: value of P1-02  
Default value: 50.0 Hz

\* The maximum speed is also limited by the switching frequency, which is set by P2-24. The limit is given by : Maximum output frequency to motor = P2-24 / 16.

#### **P1-02 Minimum Speed Limit**

This parameter sets the lower limiting boundary defining the minimum frequency (speed) that can be applied to the motor in any mode of operation.

This parameter will be displayed in Hz in the factory default state or whenever the motor rated speed parameter (P1-10) is zero. If the motor rated speed in rpm has been entered into P1-10, this parameter will be displayed in rpm.

The speed will only drop below this level after the drive enable signal has been removed, when the drive will ramp the output frequency to zero.

Maximum value: value of P1-01  
Minimum value: 0  
Default value: 0.0 Hz

#### **P1-03 Acceleration ramp time**

This parameter defines the time taken in seconds for the output frequency (speed) to increase from zero to the rated frequency (speed), as defined in parameter P1-09. too small a value will cause over current trip during motor speed acceleration.

Note that the ramp rate is unaffected by changing either the maximum or minimum speed limits (P1-01, P1-02) since the ramp time is related to P1-09 and not P1-01 / P1-02.

When set to the minimum ramp time of 0s, the output will change to the requested value within 8ms of the action being requested via the digital input or 16ms via the analog input. There will always be a minimum delay in vector mode at start up depends on motor size, which is used for build up the magnetizing current inside the motor.

Maximum value: 3000s  
Minimum value: 0s  
Default value: 5.0 s

**P1-04 Deceleration ramp time**

This parameter defines the time taken in seconds for the output frequency (speed) to decrease from the rated frequency (value in P1-09) to zero.

Too small a value may cause drive trip as over voltage depends on motor load situation.

Note that the ramp rate is unaffected by changing either the maximum or minimum speed limits (P1-01, P1-02) since the ramp time is related to P1-09 and not P1-01 / P1-02.

When set to the minimum ramp time of 0s and enable signal is removed, the drive control the motor to stop as fast as it can be without tripping as over voltage.

Maximum value: 3000s  
Minimum value: 0s  
Default value: 5.0 s

**P1-05 Stop mode select**

This parameter defines the way in which the motor comes to standstill when the drive enable signal is removed.

When P1-05 is set to 0 (factory default), the drive speed is ramped down to zero according to the setting of P1-04 (or P2-25 if the second deceleration time is in use) whenever the drive enable signal is removed. The drive will only be disabled when the drive output frequency reaches zero. (If a zero speed holding time is set in P2-16, this the drive will hold zero speed for this time before disabling). In the event of the mains supply being lost, the drive will automatically attempt to keep itself operating by braking (regenerating) a rotating motor.

When P1-05 is set to 1, coast-to-stop is selected. In this case, the drive output will be disabled as soon as the enable signal is removed, leaving the motor to coast down to zero in an uncontrolled fashion.

When P1-05 is set to 2, the motor will be ramped down to zero similarly to the case above where P1-05 = 0 whenever the drive enable signal is removed.

When the mains supply is removed, however, the drive will ramp the output down to zero at the rate defined in P2-25 if P2-25 not equal to zero. If P2-25 = 0, the output of the drive will be disabled immediately. This allows a mechanical brake to be applied immediately in the event of mains loss.

Maximum value: 2  
Minimum value: 0  
Default value: 0

**P1-06 Energy optimization**

When this parameter is set to 1, the drive will automatically detect the motor load condition. If the load is very low, then the drive will automatically reduce the output power to the motor in order to save the energy, Once the load increase, the output power will also increase.

Maximum value: 1  
Minimum value: 0  
Default value: 0 (Function disabled)

**P1-07 Motor rated voltage**

Defines the rated voltage of the motor connected to the drive (as stamped on the motor rating plate). The parameter value will be used to control the output voltage applied to the motor. The drive output voltage will be controlled so as to give the value set in P1-07 when the output speed is equal to the motor base frequency defined in P1-09.

This parameter is also used by the motor parameter auto tune function (See P4-02). An incorrect input value will cause the auto tune function to fail.

The value of this parameter will also affect the value in P4-09.

Maximum value: 500V / 250V  
Minimum value: 20V  
Default value: Drive rating (400V/230V)

**P1-08 Motor rated current**

Defines the rated current of the motor connected to the drive (as stamped on the motor rating plate).

This allows the drive to match its internal motor thermal protection (I x t protection) to the motor itself. This ensures that the drive will trip on motor overload (I.t-trP) before any thermal damage results in the motor.

This parameter is also used by the motor parameter auto tune function (See P4-02). An incorrect input value will cause the auto tune function to fail.

Maximum value: rated current of the SW2  
Minimum value: 20% rated current of the SW2  
Default value: rated current of the SW2

### **P1-09 Motor rated frequency**

Defines the rated frequency of the motor connected to the drive (as stamped on the motor rating plate). This is the frequency at which maximum (rated) output voltage will be applied to the motor. Above this frequency, the applied motor voltage is held constant at its maximum value.

This parameter is also used by the motor parameter auto tune function (See P4-02). An incorrect input value will cause the auto tune function to fail.

Maximum value: 2000Hz\*  
Minimum value: 25Hz  
Default value: 50Hz

\* The maximum speed is also limited by the switching frequency, which is set by P2-24. The limit is given by : Maximum output frequency to motor = P2-24 / 16.

### **P1-10 Motor rated speed**

Defines the rated speed of the motor (in rpm) to be connected to the drive (as stamped on the motor rating plate) which should be entered into this parameter if it is required that the drive displays its speed in rpm.

When a non-zero value has been entered into this parameter, the operating speed of the motor will be available in rpm on the display. The speed related parameters (i.e. P1-01, P1-02, P2-02 etc) will also be displayed in rpm.

In vector mode, the displayed value in rpm represents the shaft speed of the motor. In V/F speed control mode, entering a non-zero value into this parameter will activate the automatic slip compensation. If the synchronous speed has been entered into P1-10, slip compensation will be disabled, but the speed display will still be in rpm.

Maximum value: 60 x value of P-09 (eg 3000 rpm when P-09 = 50Hz)  
Minimum value: Sync speed of 20-pole motor  
Default value: 0

### **P1-11 Preset speed 1**

Parameter P1-11 permits the user to define a preset speed. The preset speed can be selected using the programmable digital inputs.

The preset speed can be set to any value within the range -P1-01 to P1-01. User can only put a positive value into this parameter if P1-12=1.

If the absolute value in these parameters is less than the minimum speed (P1-02), then the drive output speed will be limited at minimum speed.

Maximum value: P1-01  
Minimum value: -P1-01  
Default value: Base frequency of the motor (P1-09)



### **P1-12 Operation mode select**

This parameter allows the user to define whether the SW2 should be controlled from the user terminal connector (factory default setting), from the push buttons on the front of the keypad or to enable the internal PID controller.

When P1-12 = 0, terminal control mode is selected. In this case, the drive speed will be controlled either using switches and / or a potentiometer. The function of the digital inputs can be defined / programmed using P2-01.

When P-12 = 1, keypad mode is selected. In this case, the speed of the motor is controlled using the keys on the SW2 keypad. The <START> and <STOP> buttons will enable and disable the SW2 output respectively. When enabled, the speed of the drive can be ramped up and down using the <UP> and <DOWN> buttons. If remote keypad operation is required, <START>, <STOP>, <UP> and <DOWN> keys can be mounted on the front of a panel and connected electrically to the digital inputs. See Application Note ODP-AN-21 for further details.

Note that the SW2 must have the hardware enable signal applied (digital input 1 closed) before keypad control is possible.

When P1-12 = 1, only forward (positive) speeds are possible and a reversal in direction cannot occur.

When P1-12 = 2, the same functionality as above is achieved except for the fact that reverse operation is possible. In this case, the <START> button doubles up as a reverse “toggle” button. Each press of the <START> button will cause a reversal in direction. After having been stopped, the SW2 will always start in the same direction as it was last running in. This is the default configuration.

Additionally, the drive can be configured to start from zero speed by setting P2-19 = 0.

If preferred, the target speed can be preset whilst the drive is stopped. This is done by pressing the Stop button whilst stopped – the drive will then display the target speed which can be adjusted using the <UP> and <DOWN> buttons. The <NAVIGATE> button toggles between positive and negative speeds if P1-12 = 2.

### **P1-13 Event and Trip log**

This parameter holds a record of the most recent four trips and / or events that have occurred. Each trip will be displayed in abbreviated text, with the most recent trip being displayed first (displayed on entering into the value of P1-13).

Whenever a new trip occurs, this is entered at the top of the list and the other trips are shifted down. The oldest trip will then be removed from the trip log.

Note that if the most recent trip in the trip log is an “Under-voltage” trip, further Under-voltage trips will not be entered into the trip log. This ensures that the trip log does not fill up with Under-voltage trips, which naturally occur every time the SW2 is turned off.

See section 5 for detailed descriptions of the trip codes.

**P1-14 Advanced access code**

This parameter allows the user to gain access to parameter groups other than the basic parameter set (parameter group 1). Access is permitted when the value entered into P1-14 is equal to the value held in P2-38. In its factory default state, P1-14 must be set to "101" in order to gain access to the extended parameter group menus.

If access to the extended menu is to be denied (for example where the parameters have been locked – see P2-38), P2-38 can be set to a user-defined value. Access to the extended menu will only be permitted when this user-defined value is entered into P1-14.

For experienced users who need to access the motor control parameters, which are located in parameter group 6, a special access code must be entered into P1-14. The value for this access code is "702". Note that the user cannot change this code.

Maximum value:	30000
Minimum value:	0
Default value:	0

## Group 2: Extended Parameter set

### P2-01 Digital inputs function selection

The functionality of the digital inputs within the SW2 is user programmable. This allows the user to select the functions required by their particular application.

Options include: selection between preset speeds, analog input (voltage/current), external thermistor input, forward/reverse, external trip signal input, push-button operation.

See "Digital Inputs : Terminal mode" in section 4 for specific details.

### P2-02...P2-08 Preset speed 2...8

Parameters P2-02 – P2-08 permit the user to define individual preset speeds. The preset speeds are selected using the programmable digital inputs.

The preset speeds can be set to any value within the range -P1-01 to P1-01. User can only put a positive value into these registers if P1-12=1.

If the absolute value in these parameters is less than the minimum speed (P1-02), then the drive output speed will be limited at minimum speed.

Maximum value: P1-01  
 Minimum value: -P1-01  
 Default value: 0 Hz

### P2-09 / P2-10 Skip frequency / Skip frequency band

The skip frequency parameters are used to set up a band of frequencies through which the drive output frequency may pass, but never stop in. This is used typically to prevent continuous operation close to any frequency at which mechanical resonances may occur. Such resonances may simply cause excessive acoustic noise or in some case may cause mechanical stresses that could lead to mechanical failure.

Parameter P2-09 specifies the centre point of the skip frequency band and P2-10 the width of that band. Consider the following example :

P2-09 = 30Hz, P2-10 = 10Hz

This will give a skip frequency band between 25Hz and 35Hz, centred on 30Hz. If the analog speed reference then requests a speed within these limits, the speed will remain at the nearest limit. When the output frequency ramps between these two limits, it will do so at the ramp rates specified in P1-03 and P1-04.

In the event of the reverse output / motor running at negative speeds, the skip frequency band will have exactly the same effect as in the positive direction.

When the Skip frequencies are used in PID control mode, a hysteresis function is activated. The result of this is that the motor speed will remain at the lower skip band limit until the PID output increases beyond the upper limit. The same principle applies for a reducing speed reference. See application note ODP-AN-07 for further details.

P2-09:  
 Maximum value: P1-01  
 Minimum value: P1-02  
 Default value: 0

P2-10:  
 Maximum value: P1-01  
 Minimum value: 0  
 Default value: 0

**P2-11 Analog output function**

The SW2 has a dedicated analog output channel (control terminals 8 and 9). The output function can be programmed using this parameter to suit user requirements.

The format of analog output signal can be specified by P2-36 (0...10V or 4...20mA). If it is configured as a digital output, the output switches between 0V and 24V. The available options for the analog output are :

**Digital output mode: (0V/24V)**

- P2-11=0: 24V when drive is enabled, 0V when disabled.  
 P2-11=1: 24V voltage when drive is healthy (no trip), 0V when tripped.  
 P2-11=2: 24V when output frequency is within  $\pm 0.1$ Hz of target (requested) frequency, otherwise 0V.  
 P2-11=3: 24V when the output frequency is greater than "zero frequency" (0.3% of base frequency), otherwise 0V.  
 P2-11=4: 24V when the output frequency is greater than the speed limit value that is set in parameter P2-12h, 0V when less than the limit in P2-12L.  
 P2-11=5: 24V when motor current is greater than the current limit value that is set in parameter P2-12h, 0V when less than the limit in P2-12L.  
 P2-11=6: 24V when second analog input signal is greater than the limit value that is set in parameter P2-12h, 0V when less than the limit in P2-12L.

**Analog output mode: (0...10V or 4...20mA)**

- P2-11=7: The amplitude of the analog output signal represents the motor speed. It is scaled from zero to the maximum speed limit, as defined in P1-01.  
 P2-11=8: The amplitude of the output analog signal represents the motor current. It is scaled from zero to 200% of motor rated current, as defined in P1-08.  
 P2-11=9: The amplitude of the output analog signal represents the output power of the drive. And it is scaled from zero to drive rating power.  
 P2-11=10: The amplitude of the output analog signal represents the output current of the drive. And it is scaled from zero to 200% of motor rated current.

Default value: 7

**P2-12 Analog output control limit****P2-12h Analog output control high limit****P2-12L Analog output control low limit**

This parameter is only used when P2-11 is set to 4, 5 or 6.

Parameter P2-12 combines both the high and low limits, entered as separate values into P2-12. The first value in this parameter gives the high limit (with a character 'h' on the LH side of the display), and the second value in this parameter gives the low limit (with a character 'L' on the LH side of the drive display).

The upper limit is the level at which the output changes to a logic 1 output, the low limit is the level at which the output changes to a logic 0.

The two limits therefore define a hysteresis band.

If user sets P2-12h less than P2-12L, the value in P2-12L will be set equal to P2-12h automatically.

If the user changes the setting of P2-11, then the parameter values in P2-12 will be automatically reset to 100% (h) and 100%(L). The value of parameter P2-12 must therefore be redefined each time that Parameter P2-11 is changed.

Default setting: 100% / 100%

### **P2-13 Relay output function**

This parameter allows the user to select under what operating conditions the output user relay contacts are closed\*. The following settings are available :

- P2-13=0: Relay contacts closed when drive is enabled.
- P2-13=1: Relay contacts closed when drive is healthy (no trip).
- P2-13=2: Relay contacts closed when output frequency within  $\pm 0.1$ Hz of the target (request) frequency.
- P2-13=3: Relay contacts closed when the output frequency is greater than "Zero frequency"(0.3% of base frequency).
- P2-13=4: Relay contacts closed when output frequency is greater than the speed limit value that is set in Parameter P2-14h. And relay contacts open when less than the limit in P2-14L.
- P2-13=5: Relay contacts closed when motor current is greater than the current limit value that is set in Parameter P2-14h. And relay contacts open when less than the limit in P2-14L.
- P2-13=6: Relay contacts closed when second analog input value is greater than the limit that is set in Parameter P2-14h. And relay contacts open when less than the limit in P2-14L.

For hoist applications, when P2-16 > 0 and P2-13 = 0, then P2-14 sets the motor frequency (as a percentage of maximum frequency) that is applied to the motor on enable for 350ms immediately after the zero speed holding time elapses. This function prevents the load from dropping when the drive is enabled and the mechanical brake releases. See Application Note AN ODP-34a for more details.

\*: The relay is configured as normally open. See P2-15 for N.O. / N.C. configuration

Default value: 1 (drive healthy)

### **P2-14 Relay control limit**

#### **P2-14h Relay output control high limit**

#### **P2-14L Relay output control low limit**

This parameter is only used when P2-13 is set to 4, 5 or 6.

Parameter P2-14 combines both the high and low limits, entered as separate values into P2-14. The first value in this parameter gives the high limit (with a character 'h' on the LH side of the display), and the second value in this parameter gives the low limit (with a character 'L' on the LH side of the drive display).

The upper limit is the level at which the relay output changes state, the low limit is the level at which the relay output changes back again.

The two limits therefore define a hysteresis band.

If user sets P2-14h less than P2-14L, the value in P2-14L will be set equal to P2-14h automatically.

If the user changes the setting of P2-13, then the parameter values in P2-14 will be automatically reset to 100% (h) and 100%(L). The value of parameter P2-14 must therefore be redefined each time that Parameter P2-13 is changed.

Default setting: 100% / 100%

### **P2-15 Relay output mode**

This parameter enables the user to program the mode of operation of the user relay output. This can be configured to operate as normally open (N.O.) or normally closed (N.C.) by setting this parameter.

If P2-15 = 0, the relay function is normally open (N.O.)  
If P2-15 = 1, the relay function is normally closed (N.C.)

Default value: 0 (Normally open)

### **P2-16 Zero speed holding time**

This parameter could enable the drive stay at zero speed (0Hz) for a certain time whenever drive receives a stop command and reduces the output speed to zero before the output signal is completely shut down.

If P2-16=0, the output of the drive will be shut down immediately when output speed reach zero. If P2-16 not equal to zero, the drive will keep at zero speed for a certain period, which is specified by P2-16 in seconds, before the output of the drive shutting down.

This function usually operates in conjunction with relay output function so that the drive would give out a relay control signal before the drive output is disabled.

For hoist applications, this parameter must be set to value large than zero. See Application Note AN ODP-34(34a) for more details.

The holding time can be selected from minimum 0.1s to maximum 60s.

Maximum value: 60s  
Minimum value: 0s  
Default value: 0.2s

**P2-17 Start mode select**

This parameter allows the user to define the start-up mode of the SW2 and operates in conjunction with the hardware enable signal applied between terminals 1 and 2. Possible settings are:

*Edge-r:*

Edge run – requires the run signal to be applied *after* a trip or a power up before the drive will run. If the enable signal is present on power up, the drive will not run.

*Auto-0:*

Auto-run – enables whenever a run signal is present (assuming no trip). If the run signal is present on power up, the drive will run immediately.

*Auto-1 → Auto-4:*

As Auto-0, except for the fact that the SW2 will attempt to auto restart after a trip. The number of re-start Attempts is given by the number after the “Auto-“. The re-start counter is reset after a power down or a reset operation that performed by user through pushbuttons.

In the factory default setting (Auto-run), the SW2 will start and run whenever terminals 1 and 2 are linked, provided there is no trip condition.

“Edge-r” may be used where the drive should not start automatically on power up should the run switch be closed. In this case, the run switch must be opened and then re-closed before the drive will start. The same rule applies after clearing / re-setting a trip condition.

If the application requires that the drive attempts to re-start after a trip condition, parameter P2-17 can be set to Auto-1 ... Auto-4, in which case the drive will attempt to clear the trip and re-start between 1 and 4 times after a trip. After this number of re-starts has been attempted, the drive will remain in a tripped state. Typically, an operator would investigate the cause of the trips at this stage. In each of these cases, a delay of 20s will elapse after a trip before the SW2 attempts a re-start.

Default setting: Auto-0 (enables whenever a run signal is present), no attempts to restart are made after a trip.

**P2-18 Spin start enable**

This parameter enables the spin start function, which will identify the speed and direction of rotation of a motor when the drive is enabled. The SW2 will then automatically jump to this speed and then start ramping to the target speed.

Do not restart the drive in a short interval. This may cause the over current trip during spin start function.

The speed detection process takes less than 1s, unless the speed is zero in which case the detection may take several seconds, but never more than 5s.

If this parameter is set to one, then the spin start function is always activated each time the drive is enabled. If this parameter is zero, the spin start detection process is disabled and there is no start delay on enabling the drive.

Default setting: 0 (Spin start disabled)

**P2-19 Keypad restart mode**

This parameter specifies the restart target speed used on enable when operating in keypad control mode.

P2-19=0 or 2:

Target speed is reset to minimum speed (P1-02) when drive is disabled, such that minimum speed will be the target speed next time the drive is enabled.

In this mode of operation, the user cannot preset a target speed though the keypad. The drive will always start from minimum speed.

P2-19=1 or 3:

The previous speed of operation prior to the drive last being disabled will be used as target speed next time the drive is enabled.

If P2-19= 0 or 1, the drive must receive a START signal (eg from the START button) in addition to digital input 1 being closed to cause the drive to run. Pressing the STOP button will stop the drive.

If P2-19 = 2 or 3, the drive will be start as soon as digital input 1 is closed. A start signal is not required. Opening digital input 1 will stop the drive. In this case, the start and stop buttons on the drive control panel will not function.

Default setting: 1 (Previous speed as target speed)

**P2-20 Standby mode enable**

SW2 provides a Standby function that will automatically disable the drive output when drive output speed has remained at 0Hz for greater than the specified time.

P2-20 = 0: Standby function is disabled. SW2 will continue to deliver power to the motor at zero speed as long as the drive is enabled.

P2-20 = 1 ~ 60: SW2 will enter Standby mode when drive has remained at zero speed for the time set in this parameter. When this time has elapsed, the output of the drive will be disabled automatically. As soon as the target speed reference deviates from zero, the drive will automatically re-enable and ramp to the target speed.

If there is a non-zero value in the parameter P2-16, then the standby function will be disabled.

Default setting: 0 (Standby function disabled)

**P2-21 Display scaling factor**

P2-21 enables the user to scale the data from a selected source to provide a displayed value that better represents the controlled process. The source value to be used by the display scaling calculation is defined in P2-22.

If P2-21 has a non-zero value, then a scaled display value becomes visible on the display in addition to motor speed, motor current and motor power. Pressing the



<NAVIGATE> button cycles through the real-time values. A lower case character 'c' on the left-hand side of the display indicates that the scaled display value is being displayed. The scaled display value is calculated by the following equation:

$$\text{Scaling display value} = \text{P2-21} * \text{Scaling source value}$$

If P2-21 = 0, then the scaled display function is disabled.

Maximum value:	30.000s
Minimum value:	0.000s
Default setting:	0.000 (Function disabled)

### **P2-22 Display scaling source**

This parameter determines which input data source will be used as the source value for display scaling purposes. This parameter will have no effect if the scaling factor (P2-21) is set to zero.

P2-22 = 0 : Second analog input value is used as scaling source data. In this case, the range of input data value is from 0 to 4096.  
P2-22 = 1 : Motor speed information is used as scaling source data.

Default setting : 0

### **P2-23 Brake circuit enable**

SW2 sizes #2 to #6 have a built-in brake circuit for connection of an external braking resistor in order to dump the re-generated energy from the motor. P2-23 controls the functionality of the brake circuit.

P2-23 = 0 : brake circuit is disabled. The brake transistor inside the drive remain disabled even if the drive is in regeneration condition.  
P2-23 = 1 : brake circuit is enabled and the software overload protection is also enabled. The overload protection is assumes that Invertek's standard low power rating braking resistor is connected to the brake terminals.  
P2-23 = 2 : brake circuit is enabled and the software overload protection is also enabled. The overload protection is assumes that Invertek's standard higher power rating braking resistor is connected to the brake terminals.  
P2-23 = 3 : brake circuit is enabled but without braking resistor overload protection. This is intended for use with custom / higher power brake resistors.

Default setting : 0

**P2-24 Effective switching frequency**

This parameter allows the user to select the drive output switching frequency to cater for different application requirements.

When operating at a particular switching frequency, there will be an associated acoustic noise produced by the motor at that particular switching frequency. In most industrial applications (400V supplies), this is of little consequence as background noise is much greater.

However, domestic (220V) applications tend to be used in quieter environments where acoustic noise is important.

The selected switching frequency value will also affect some other motor control parameters. For example the maximum speed limit and maximum motor base frequency are limited by the switching frequency. The maximum output frequency limit will reduce if the effective switching frequency value is reduced.

The relationship between maximum output speed / motor base frequency and the effective switching frequency is:

Effective switching freq	Maximum speed/ Base freq
4kHz	250Hz
8kHz	500Hz
16kHz	1000Hz
24KHz	1500Hz
32KHz	2000Hz
Auto*	2000Hz

\*: value depends on maximum switching frequency of the drive, see table below:

Drive Size	Max available switching frequency
Size 1, Size 2	32KHz
Size 3 230V 3KW/4HP 4KW/5HP Size 3 400V 5.5KW/7.5HP 7.5KW/10HP	32KHz
Size 3 Others	24KHz
Size 4	24KHz
Size 5 230V 22KW/30HP 30KW/40HP Size 5 400V 45KW/60HP 55KW/75HP	16KHz
Size 5 230V 37KW/50HP Size 5 400V 75KW/100HP	8KHz
Size 5 230V 45KW/60HP Size 5 400V 90KW/150HP	4KHz
Size 6 230V 55KW/75HP Size 6 400V 110KW/160HP	16KHz
Size 6 230V 75KW/100HP Size 6 400V 132KW/200HP	8KHz
Size 6 230V 90KW/120HP Size 6 400V 160KW/250HP	4KHz

The user can change the switching frequency at any time as long as the selected maximum frequency / rated frequency is applicable.

Note that when Auto mode is selected, then drive will use minimum available switching frequency based on parameter P1-01. (Minimum value will be 4Khz)

Default setting: Rating dependent

**P2-25 Second deceleration ramp time**

This parameter defines the time taken in seconds for the output frequency (speed) to decrease from the rated frequency (value in P1-09) to zero.

Note that the ramp rate will not be affected by changing either the maximum or minimum speed limits (P1-01, P1-02) since the ramp time is related to P1-09.

When set to the minimum ramp time of 0s, the second deceleration ramp time is disabled, resulting in the main deceleration ramp time (P1-04) being used.

Maximum value: 3000s  
Minimum value: 0s  
Default value: 30s

**P2-26 Reserved**

This parameter is reserved.

**P2-27 Drive communications address**

All communications between the SW2 and other peripheral products (eg Optiwand CE, OptiPort etc) is carried out via the optical IrDA interface. To allow multiple drive communications networks (where multiple drives are connected to the same optical link), it is necessary for each drive to have its own unique identifier i.e. drive address.

The drive address can be set to any value between 1 and 63, allowing up to 63 discrete drives to be connected on the same optical network. When any SW2 receives a valid telegram (message) via the optical interface, it will only respond to the command if that telegram contains its own drive address. In this way, any one drive from the entire group of 63 can be picked out which will then respond in the requested manner.

If P2-27 = 0, all communications are disabled.

Maximum value: 63  
Minimum value: 0  
Default setting: 1

**P2-28 Master/Slave mode select**

This parameter decides whether the drive should work as a master or as a slave in a network system.

If the drive has been set as a master drive and its address is  $\geq 1$ , then it will send out the status information including speed information periodically in order to synchronize the other slave drives within the same network.

P2-28=0: Slave mode  
P2-28=1: Master mode

Default setting: 0 (Slave mode)

**P2-29 Digital speed reference preset scaling factor**

The digital speed reference input to the drive is scaled by this factor when P2-35 = 1. Operates on references originating from the serial data link. This parameter can be used as an electronic gearbox for Master / Slave applications.

This function is especially suitable for those applications in which all drives in the network should be synchronised but run at different speeds based on a fixed scaling factor.

For example, if a slave drive set P2-29 to 80% and the master drive of the network runs at 50Hz, then the slave drive will run at 40Hz after being enabled. See P2-35 for more information.

Maximum value: 500.0%  
Minimum value: 0.0%  
Default setting: 100.0%

**P2-30 Bipolar analog input format**

This parameter allows the user to configure the bipolar analog input to suit the format of the signal connected to the analog input control terminals. The following formats are supported:

Voltage 0...24V, 0...10V, -10...10V

When set to 0...24V or 0...10V, all negative input voltages will give zero speed. When set to -10...10V, all negative voltages will result in the drive running with a negative speed, where the speed is proportional to the magnitude of the input voltage.

Current signal formats are supported by the second analog input.

Default setting: 0...24V

**P2-31 Bipolar analog input scaling factor**

This parameter will scale the bipolar analog input value according to the value of this parameter. This function is usually used to ensure that full speed is reached at the maximum voltage available on the analog input terminals.

The scaled input value = P2-31 \* unscaled analog input value

The scaled analog input value is internally limited to ensure that it remains within range.

Maximum value: 500.0%  
Minimum value: 0.0%  
Default setting: 100.0%

**P2-32 Bipolar analog input offset**

This parameter is only valid when the bipolar analog input signal formats are unipolar, i.e. 0...24V or 0...10V.

This parameter can be used to introduce an offset to the analog input, such that the speed remains at the minimum speed limit until the input voltage exceeds this offset.

For cases where the minimum available input voltage is > 0, the offset can also be used to ensure that speed increases linearly from minimum to maximum speed starting at the available input voltage.

For example, if the minimum value of the external input voltage signal is 1V (assume that P2-30 = 0...10V), setting P2-32 = 10.0%, will give a 0Hz output on the drive output when 1V is applied on the bipolar analog input.

Maximum value: 500.0%  
Minimum value: -500.0%  
Default setting: 0.0%

**P2-33 2<sup>nd</sup> analog input format**

This parameter allows the user to configure the 2<sup>nd</sup> analog input to suit the format of the signal connected to the 2<sup>nd</sup> analog input. The following formats are supported:

Voltage 0 / 24V(functions as a digital input), 0...10V  
Current 4...20mA, 0...20mA

All input formats are unipolar.

Default setting: 0...10V

**P2-34 2<sup>nd</sup> analog input scaling factor**

This parameter will scale the 2<sup>nd</sup> analog input value according to the value of this parameter. This function is usually used to ensure that 100% is reached when the voltage available on the analog input terminals is at its maximum.

The scaled input value = P2-34 \* unscaled 2<sup>nd</sup> analog input value

The scaled analog input value is internally limited to ensure that it remains within range.

Maximum value: 500.0%  
Minimum value: 0.0%  
Default setting: 100.0%

**P2-35 Digital speed reference scaling control**

Only active in keypad control mode and usually used in a Master/Slave network application.

When P2-35 = 1,  
Actual speed = Digital speed \* P2-29.

When P2-35 = 2,  
Actual speed = (Digital speed x P2-29) + bipolar analog input  
Max analog input is equal to P1-01

When P2-35 = 3,  
Actual speed = (Digital speed x P2-29) x bipolar analog input  
Analog input scales 0% ... 200%

If P2-35=0, function is disabled.

Default setting:        0

**P2-36 Analog output format**

This parameter determines which analog signal format should be used for the analog output function. The available formats include :

0...10V /10..0V        voltage output format  
4...20mA /20..4mA    current output format.

The output signal format is only valid when the parameter value in P2-11 is set to 7, 8 or 9 (ie analog formats). See P2-11 for further information.

Default settings: 0...10V

**P2-37 Extended Parameter access code**

Parameter P2-37 can be used to allow the user to specify their own extended menu access code. Access to the extended menu (Parameter group 2,3,4,5) is only permitted when the value entered into P1-14 equals that stored in P2-37.  
In this way, the user may change to code from the standard value of "101" to any desired value.

Maximum value: 9999  
Minimum value: 0  
Default setting: 101

**P2-38 Parameter Lock**

This parameter allows the user to specify whether the parameter value can be changed or not.

- P2-38 = 0 All parameters can be accessed and changed. All changes will be saved in permanent memory and will apply even after a power down. The parameter save-to-memory process is automatic.
- P2-38 = 1 All parameters can be accessed for read purposes but changes are not permitted. This ensures that a set of working parameters can not be changed by unauthorised users.  
All parameters values that have been locked by this process will not blink – an indication that the value cannot be changed.  
Any attempts to make a change to a parameter value will not be permitted and an upper case character 'L' will be seen in the drive display window indicating that the parameter is locked.

Default setting: 0

**P2-39 Hours run indicator**

This is a read-only parameter indicating the number of hours that the SW2 has been running.

It is not re-settable and therefore holds useful information on the overall run-time of the drive and / or the equipment that it is driving.

There are two different display formats for this parameter, depending on the hours that the drive has been running.

If the total running hours is less than 100 hours, the parameter display format would be for example :

33h 42 indicating 33 hours, 42 minutes

If the total running hours is greater than 100 hours, the parameter display format would be for example :

4124h indicating 4124 hours

**P2-40 Drive type / rating**

This read-only parameter allows the user to verify the SW2 drive type, voltage rating and power rating. This should always correspond with the ratings on top of the drive.

A typical display indicating the voltage/power rating would be:

" 0.37", "0 230" : 3<sup>GV</sup> 230V 0.37kW  
"HP 20", "3 460" : 3<sup>GV</sup>-W, 460V 20HP

## **Group 3 : Ramp Control Micro Parameter**

### **P3-01 Acceleration ramp 1 speed set point**

Speed set pint, percentage value of P1-01. Acceleration ramp value in P3-02 will be used once the drive speed over this set point  
If set to zero, then acceleration ramp 1 is disabled.

Maximum Value: 100.0%  
Minimum Value: 0%  
Default Value: 0%

### **P3-02 Acceleration ramp 1**

Acceleration ramp time 1. This ramp time will be used once motor speed over the limit set by P3-01 provided P3-01 not equal to zero.

Maximum Value: 3000s  
Minimum Value: 0.0s  
Default Value: 5.0s

### **P3-03 Acceleration ramp 2 speed set point**

Speed set pint, percentage value of P1-01. Acceleration ramp value in P3-04 will be used once the drive speed over this set point  
If set to zero, then acceleration ramp 2 is disabled.

Maximum Value: 100.0%  
Minimum Value: 0%  
Default Value: 0%

### **P3-04 Acceleration ramp 2**

Acceleration ramp time 2. This ramp time will be used once motor speed over the limit set by P3-03 provided P3-03 not equal to zero.

Maximum Value: 3000s  
Minimum Value: 0.0s  
Default Value: 5.0s

### **P3-05 Deceleration ramp 1 speed set point**

Speed set pint, percentage value of P1-01. Deceleration ramp value in P3-06 will be used once the drive speed large than this set point.  
If set to zero, then acceleration ramp 1 is disabled.

Maximum Value: 100.0%  
Minimum Value: 0%  
Default Value: 0%



**P3-06 Dcceleration ramp 1**

Dcceleration ramp time 1. This ramp time will be used once motor speed large than the limit set by P3-05 provided P3-05 not equal to zero.

Maximum Value: 3000s  
 Minimum Value: 0.0s  
 Default Value: 5.0s

**P3-07 Deceleration ramp 2 speed set point**


Speed set pint, percentage value of P1-01. Deceleration ramp value in P3-08 will be used once the drive speed large this set point  
 If set to zero, then Deceleration ramp 2 is disabled.

Maximum Value: 100.0%  
 Minimum Value: 0%  
 Default Value: 0%

**P3-08 Dcceleration ramp 2**

Dcceleration ramp time 2. This ramp time will be used once motor speed large than the limit set by P3-07 provided P3-07 not equal to zero.

Maximum Value: 3000s  
 Minimum Value: 0.0s  
 Default Value: 5.0s

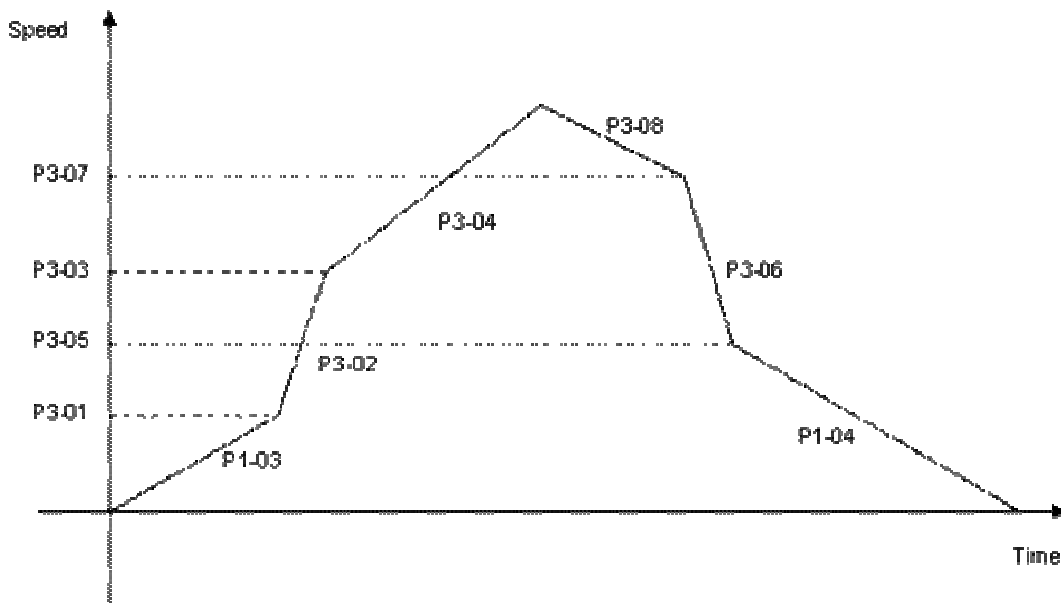

## Group 4 : VECTOR CONTROL PARAMETER SET

### P4-01 Control mode

This key parameter defines which motor control mode should be used for the motor control application. There are three different motor control modes available:

P4-01=0 Vector speed control mode with estimated rotor speed feedback control)  
Field orientated control algorithms are used for motor speed control. Since estimated rotor speed is used to internally close the speed loop, this mode of operation effectively gives closed loop performance without a physical encoder. With a correctly tuned speed controller, steady state speed regulation is typically better than 1%. An Auto-tune (P4-02) should be carried out prior to first operation to ensure best control.

P4-01=1 Torque control mode

Instead of controlling the motor speed, the motor output torque is controlled directly. In this mode of operation, the output speed will vary dependent on load. The maximum speed is limited by P1-01. This mode is often used for winding applications, where a constant torque is required to maintain tension in a cable. An Auto-tune (P4-02) should be carried out prior to first operation to ensure best control.

P4-01=2 V/F speed control mode

This mode is effectively voltage vector control, where applied motor voltage is controlled rather than the torque producing current. The magnetising current is controlled directly, so that voltage boost is not required.

The Voltage characteristic can be selected using the HVAC parameter (P1-06). The default setting gives a linear characteristic, where voltage is proportional to frequency, noting that the magnetising current is independently controlled. Setting HVAC mode to 1 selects a reduced voltage characteristic, where applied motor voltage is reduced at lower speeds. This is typically used for fan applications to save energy consumption. The Auto-tune function should also be called in this mode of operation. In this case, the tuning process is less complex and completes very quickly.

Note that the motor parameters are extremely important, particularly in vector control mode, if best control performance is to be achieved. Note that incorrect motor parameters may result in poor motor performance when vector mode is active. Voltage control mode (P4-01 = 2) is relatively insensitive to motor parameters.

Default Setting: 2 (V/F speed control mode)

### P4-02 Motor parameter auto measurement

In order to get the best performance for the motor control applications, the motor parameters which are required by the Optidrive Plus control algorithms need to be close to their true values.

The Auto-tune will measure stator resistance, stator inductance, leakage inductance, rotor resistance and magnetising current. Since most parameters are difficult to measure by hand, the auto-tune is an essential part of the Optidrive Plus to ensure that best performance is achieved by all users very easily.

P4-02=0 Auto tune is disabled.

P4-02=1 Auto tune is enabled. No hardware enable signal is required. The auto-tune function will start immediately.

Before enable this auto-tune function, user must input the correct value of motor rated voltage, rated current and base frequency to the drive.

Note that no matter the auto-tune function finished correctly or failed, this parameter will always be reset to 0 automatically

During the auto-tune function, the motor may spin slightly. Extra care should be taken.

When running, the message “Auto-t” will be displayed, indicating that Auto tune is in progress. The display automatically returns to “Stop” on completion. Note that the auto-tune may take a couple of minutes to complete for some motors.

See application note ODP-AN-33 for further information

Default setting: 0 (Function disabled)

### **P4-03/P4-04/P4-05 Vector mode speed controller control parameters**

These three parameters are used to adjust the close loop speed PID controller performance when the drive runs in vector speed control mode (P4-01=0).

#### **P4-03 Proportion Gain**

Maximum value: 4096

Minimum value: 0

Default setting: 1000

#### **P4-04 Integral time constant**

Maximum value: 1.000s

Minimum value: 0.01s

Default setting: 0.05s

#### **P4-05 Differential time constant**

Maximum value: 0.100s

Minimum value: 0.001s

Default setting: 0.01s

Increasing P4-03 will increase the instantaneous responsiveness to a speed error, but will cause instability if the value is too high.

Increasing the P4-04 gives a slower response to errors.

For P4-05, a higher value gives slower, more damped speed control response. Too small a value in this parameter will cause instability.

In general, set the Integral time constant to a smaller value, then increase the P-gain to give the maximum possible value without instability, then increase the Integral time constant to give the desired response.

### **P4-06 Torque reference select**

This parameter is used to select the torque reference input source when Optidrive Plus runs in torque control mode. (P4-01=1)

P4-06=0 A fixed digital preset value set by P4-07 is used as torque reference.

P4-06=1 The bipolar analog input value will be used as torque reference. Note that the analog input signal should be unipolar format. If the analog input is configured as a bipolar input (-10V...+10V), then any negative input signal will limit to zero, giving a zero torque reference.

P4-06=2 The 2<sup>nd</sup> analog input value will be used as torque reference.

P4-06=3 This is only available for 3GV-M. Torque reference from network master.

Default setting: 0

**P4-07 Torque limit preset value**

This parameter only has an effect when P4-06 = 0 and will give a digital percentage torque reference value, where 100% equates to motor rated output torque. If the load torque on the motor is large than the value set in this parameter, then the motor speed will reduce to zero. Motor speed will not come back to the reference value until the load torque is less than the value that set in this parameter.

Maximum value: 200%  
 Minimum value: 0%  
 Default setting: 200%

**P4-08 Minimum torque reference limit**

This parameter defines the minimum output torque limit.

If this parameter is not set to zero in speed control mode (P4-01), then once the motor output torque less than this value, motor output speed will be increase automatically until reach maximum speed limit. Once the motor output torque is large than this value, motor speed will return to reference speed value.

Maximum value: 150%  
 Minimum value: 0%  
 Default setting: 0%

**P4-09/P4-10 V/F characteristic adjustment point / voltage**

The Voltage - Frequency characteristic defines the level of voltage that is applied to the motor at any given frequency.

Parameters P4-09 and P4-10 allows the user to modify the V/F characteristic should this be required.

Parameter P4-09 can be set to any frequency between 0 and the base frequency (P1-09) and represents the frequency at which the adjustment voltage set in P4-10 is applied.

This is best visualised by considering a rubber band stretched along a line representing the Voltage/Frequency characteristic. The effect on the V/F characteristic of changing P4-09/ P4-10 is the same as getting hold of the rubber band at the frequency specified in P4-09 and moving it up or down to represent the voltage adjustment level that specified in P4-10. In this way, there is a smooth change in voltage as frequency increases, thereby avoiding voltage discontinuities.

Note that the voltage at any particular frequency can be increased or decreased to suit the needs of the application. See ODP-AN-15a for further information.

When P4-09 = 0, this function is disabled.

**P4-09: V/F adjustment frequency**

Maximum value: P1-09  
 Minimum value: 0  
 Default value: 0

**P4-10: V/F adjustment voltage**

Maximum value: P1-07  
 Minimum value: 0  
 Default value: 0

**Group 5 : MOTOR CONTROL PARAMETERS (HIDDEN)****P5-01 Motor stator resistance**

This represents the motor stator resistance value in Ohms, as is measured across two phases of the motor.

The value in this parameter could be changed if required, although this should always be calculated by the Auto-tune function. This value can be read via Parameter group zero (P0-17)

Maximum value: Drive dependent  
Minimum value: 0  
Default setting: Rating dependent

**P5-02 Motor rotor resistance**

This represents the motor stator resistance value in Ohms. This cannot be measured directly from the motor terminals.

The value in this parameter could be changed if required, although this should always be calculated by the Auto-tune function. This value can be read via Parameter group zero (P0-19)

Maximum value: Drive dependent  
Minimum value: 0  
Default setting: Rating dependent

**P5-03 Motor stator inductance**

This represents the motor stator inductance value in Henry and is equivalent to the phase inductance.

The value in this parameter could be changed if required, although this should always be calculated by the Auto-tune function. This value can be read via Parameter group zero (P0-18).

Maximum value: Drive dependent  
Minimum value: 0  
Default setting: Rating dependent

**P5-04 Magnetising current**

This parameter represents the motor magnetising current value in Ampere. Whenever P1-08 (motor rated current) is changed, this value is approximated to 0.6 x motor rated current, assuming a motor power factor of 0.8. When Auto-tune subsequently runs, a more accurate value will be determined automatically.

The value in this parameter could be changed if required, but will be determined by Auto-tune. The measured value can be read via Parameter group zero (P0-14).

Default setting: Rating dependent

**P5-05 Motor power factor ( Cos  $\Phi$  )**

This parameter value represents the motor power factor, calculated by the Auto-tune algorithms.

Maximum value: 0.99  
Minimum value: 0.50  
Default setting: Rating dependent

**P5-06 Leakage coefficient**

This parameter value represents the motor leakage inductance coefficient, calculated by the Auto-tune algorithms.

Maximum value: 0.250  
Minimum value: 0.025  
Default setting: 0.100

**P5-07 Quick Rs measurement enable**

Since an auto-tune is usually carried out during the commissioning process, the motor is usually cold when this happens. Temperature dependent parameters – especially stator resistance – can vary significantly during operation.

Whenever the drive is enabled from a stopped condition, the drive will normally start from the Auto-tuned (cold) parameters. To cater for the possible variance in stator resistance, the drive can carry out a quick stator resistance measurement on enable. This is carried out during the magnetisation phase and can add a delay of one magnetisation time constant (typically 100 – 200 ms) before the drive will start to ramp up in speed.

This parameter enables (1) or disables (0) the motor stator resistance quick measurement when the drive run signal is given.

This function is only active when the drive is in vector control mode.

Default setting: 1 (Quick Rs measurement enabled)

**P5-08 Motor parameter adaptation**

Usually the motor parameters, particularly stator resistance and rotor resistance will change if the motor temperature changes, adversely affecting the motor control performance of the drive. Optidrive Plus has built-in motor parameter adaptation, which enables the control algorithms to track the motor parameters in real time, automatically adjusting the parameter values used for the internal control algorithms.

Default setting: 1 (Parameter adaptation enabled)

**P5-09 Rotor speed control enable**

This parameter is only valid in vector speed control mode. This parameter defines whether the motor rotor speed should be used for close loop control feedback signal or not. When set to 1, rotor speed will be used for the speed control loop. When set to 0, the drive will control the motor speed without rotor speed feedback information.

Note that use may have to adjust P4-03 when operating in this mode.

Default setting:        1        (close loop control enabled)

**P5-10 Internal current filter enable**

This parameter is used to enable or disable the internal current sampling filter.

Default setting:        1        (Filter enabled)

**P5-11 Minimum output pulse limitation**

This parameter is used to limit the minimum output pulse width, which can be used for long cable applications. Increasing the value of this parameter will reduce the risk of over-current trips on long motor cables, but will also reduce the maximum available output motor voltage for a given input voltage.

The minimum pulse is defined by :    Duration (ns) = P5-11 \* 16.67

Default setting:        Drive dependent  
Minimum value:        0  
Maximum value:        500

**P5-12 V/F mode magnetising current setup delay**

This parameter is used to set up a minimum delay time for the magnetising current control in V/F mode when drive run signal is given.

Too small a value may cause the drive to trip on over-current if the acceleration ramp is very short.

Default setting:        Drive dependent  
Minimum value:        0  
Maximum value:        2000ms

## Group 6 : APPLICATION SPECIFIC PARAMETERS

### P6-01 Software upgrade enable

This parameter is used to enable SW2 firmware upgrades. All upgrades are carried out via the standard IrDA interface. Upgrades require an official upgrade file, provided by the manufacturer. Each motor control upgrade file is specific to a drive type and power rating and should only be used on a drive of the correct power rating. The I/O processor upgrade file is identical for all drive types.

- P6-01 = 0      Function is disabled (normal operation)
- P6-01 = 1      IO processor upgrade function is enabled. Set this parameter to 1 to upgrade the I/O processor firmware. The display changes to a line of dashes, indicating that the drive is ready for upgrade. On completion, the display returns to STOP.
- P6-01 = 2      Motor control processor upgrade function is enabled. Set this parameter to 2 to upgrade the motor control processor software. After setting to 1, the drive must be powered down fully and then powered back up again. The display will then show "Prog..." indicating that the drive is ready for upgrade. On completion of the upgrade, the drive will display "dAtA-F" indicating that the flash upgrade is complete and that the parameters have been returned to default values. Press the <STOP> button to acknowledge after which the display returns to "StoP"

On completion of an upgrade, or after a power up, the value of P5-01 will be reset to zero automatically.

See ODP-AN-28 and ODP-AN-29 for more information.

Default setting:      0

### P6-02 Thermal management

This parameter determines whether or not the thermal fold back function should engage when the drive temperature reaches a preset level. Since higher switching frequencies result in higher thermal losses, a possible over-temperature trip can be avoided by reducing switching frequency.

- P6-02=0      Automatic thermal fold back is disabled. The drive will remain operating at the specified switching frequency until an over temperature ("O-t") trip occurs.
- P6-02=1      Automatic thermal fold back is enabled. The drive will reduce the switching frequency to a lower level automatically when the drive temperature reaches a level just below the trip level. The lower losses result in a reduction in drive temperature. The drive will not automatically increase the switching frequency if the load, hence temperature reduces. After a disable or power down, the drive reverts to the original switching frequency set in P2-24.

Default setting:      0      (Function disabled)

Note : Only drives that have a power module or heatsink thermistor can benefit from this function.



**P6-03 Auto-reset delay time**

This parameter defines the auto restart time delay for the drive after a trip condition.

Maximum value: 60s  
Minimum value: 1s  
Default setting: 20s

**P6-04 Relay speed hysteresis band**

This parameter defines the speed control hysteresis band for analog digital output and relay output function.

This parameter will define a speed band as a percentage value of drive maximum speed (P1-01). This parameter is used to prevent "chatter" on the output if the operating speed coincides with the level at which the digital / relay output changes state.

Maximum value: 25.0%  
Minimum value: 0  
Default setting: 0.3%

**P6-05 Boost speed for hoist function**

This parameter defines the boost speed value for the hoist control function for more information regarding this parameter please see section 7.

This parameter will defines a speed as a percentage value of drive maximum speed (P1-01)

Maximum value: 10.0%  
Minimum value: 0  
Default setting: 0

**P6-06 Boost speed holding time for hoist function**

This parameter defines time during which the boost speed will be applied on the motor. This parameter is special designed for hoist applications. For more information regarding this parameter please see section 7.

Maximum value: 5.0s  
Minimum value: 0.1s  
Default setting: 0.4s

**P6-06 Speed zone setup**

This parameter defines percentage value of drive rated speed in P1-09 as speed zone, which is used to jump across in order to avoid torque loss when motor stator electronic frequency close to zero.

If set to zero, then this jump function is disabled

Maximum value: 20.0%  
Minimum value: 0.0%  
Default setting: 0.0%

**P6-08 Terminal ramp selection**

When set to 1, this parameter will enable use to select different acceleration/deceleration ramp by digital input status when drive in terminal control with P2-01=5.

When this function is enabled, if digital input 3 is closed, then the Acc/Dec ramp that defined in P3-02/P3-04 will be used for ramp control. If it is open, then normal ramp that defined in P1-03/P1-04 will be used for ramp control. Speed reference depends on digital input status.

Maximum value: 1  
Minimum value: 0  
Default setting: 0

## 5. *Fault codes, drive status and diagnostics*

To enable the operational status of the drive to be determined at any time, the following information is displayed :

Drive OK, disabled :           StoP  
 Fault / trip :                    fault mnemonic as defined below.

The following list indicates which mnemonics will be displayed under fault / trip conditions, and their meaning.


<b>Trip message</b>	<b>Explanation</b>
P-dEF	Default parameters loaded, usually after pressing STOP, UP & DOWN keys for 1s. Press STOP to reset the trip. Display then reads "StoP"
"O-l"	Over-current on drive output to motor. Trip on drive enable : check for wiring error or short circuit Trip on motor starting : check for stalled or jammed motor Trip during operation : check for sudden overload or malfunction
"l.t-trP"	Drive overload trip, occurring when the drive has been delivering >100% rated current (set in P1-08) for a period of time. The display flashes to indicate an overload condition.
"O-Uolt"	Over-voltage on DC bus. Check supply voltage is within limits. If trip occurs on deceleration, reduce deceleration time or fit braking resistor
"U-Uolt"	Under-voltage trip. Happens routinely when drive powered down. If it occurs whilst running, check supply voltage
"Ol-b"	Over current in the brake resistor circuit. Check cabling to brake resistor
"OL-br"	Brake resistor overload. Increase deceleration time, reduce load inertia or add further brake resistors in parallel. Ensure minimum resistance values from ratings tables in section 7.4 are observed.
"O-t"	Over-temperature trip. Check drive cooling and possible enclosure dimensions
"U-t"	Under-temperature trip. Trip occurs if ambient is less than 0 OC. Drive ambient temperature must be raised above zero in order to start the drive.
"PS-trP"	Trip on drive enable : check for wiring error or short circuit Trip during operation : check for sudden overload or over-temperature
"dAtA-F"	Occurs routinely after Flash upgrade. Reset using the STOP button or after a power down cycle. All parameters set to default after an upgrade.
"P-LOSS"	If a drive intended for use with a 3-phase supply has one phase removed. Condition must persist for >15s before a trip occurs. Phase loss detection disabled if parameters defaulted (P-dEF) when L3 has been removed.
"Ph-lb"	Phase imbalance. Trips if the phase imbalance exceeds 3%. Condition must persist for >30s before a trip occurs.
"SC-trP"	Check integrity of OptiLink (communication link) between drives interconnected optically. Check that each drive in a network has a unique drive address (P2-27) If Modbus function enabled, check Modbus communication link.
"E-triP"	External trip (connected to digital input 3). Check motor thermistor (if connected)
"At-Fxx"	Auto-tune failed to complete successfully. (xx = 01...07) See 6.3 for more details.
"SPIN-F"	Spin start function failed to detect motor speed. Check cable connection between drive and motor. Make sure motor speed less than maximum speed limit (P1-01). Make sure motor base frequency(P1-09) less than 100Hz

**Auto tune trouble shooting**

<b>Trip message</b>	<b>Explanation and check point</b>
At-F01	Measured motor stator resistance varies between phases. Ensure that all motor phases are connected to the drive. Check motor for winding imbalance.
At-F02	Measured motor stator resistance is too large. Ensure that motor is connected. Check that the motor power matches the drive power rating.
At-F03	Measured motor inductance is too low. Ensure that there is no short circuit on the motor or a winding fault. Check that the motor power matches drive power rating.
At-F04	Measured motor inductance is too high. Check for motor connection fault. Check that the motor power matches drive power rating.
At-F05...At-F07	Motor parameter measurements not convergent. Check motor windings for fault. Check that the motor power matches drive power rating.


## 6. Control function flowchart

### 1. Bipolar analog input function setup flowchart

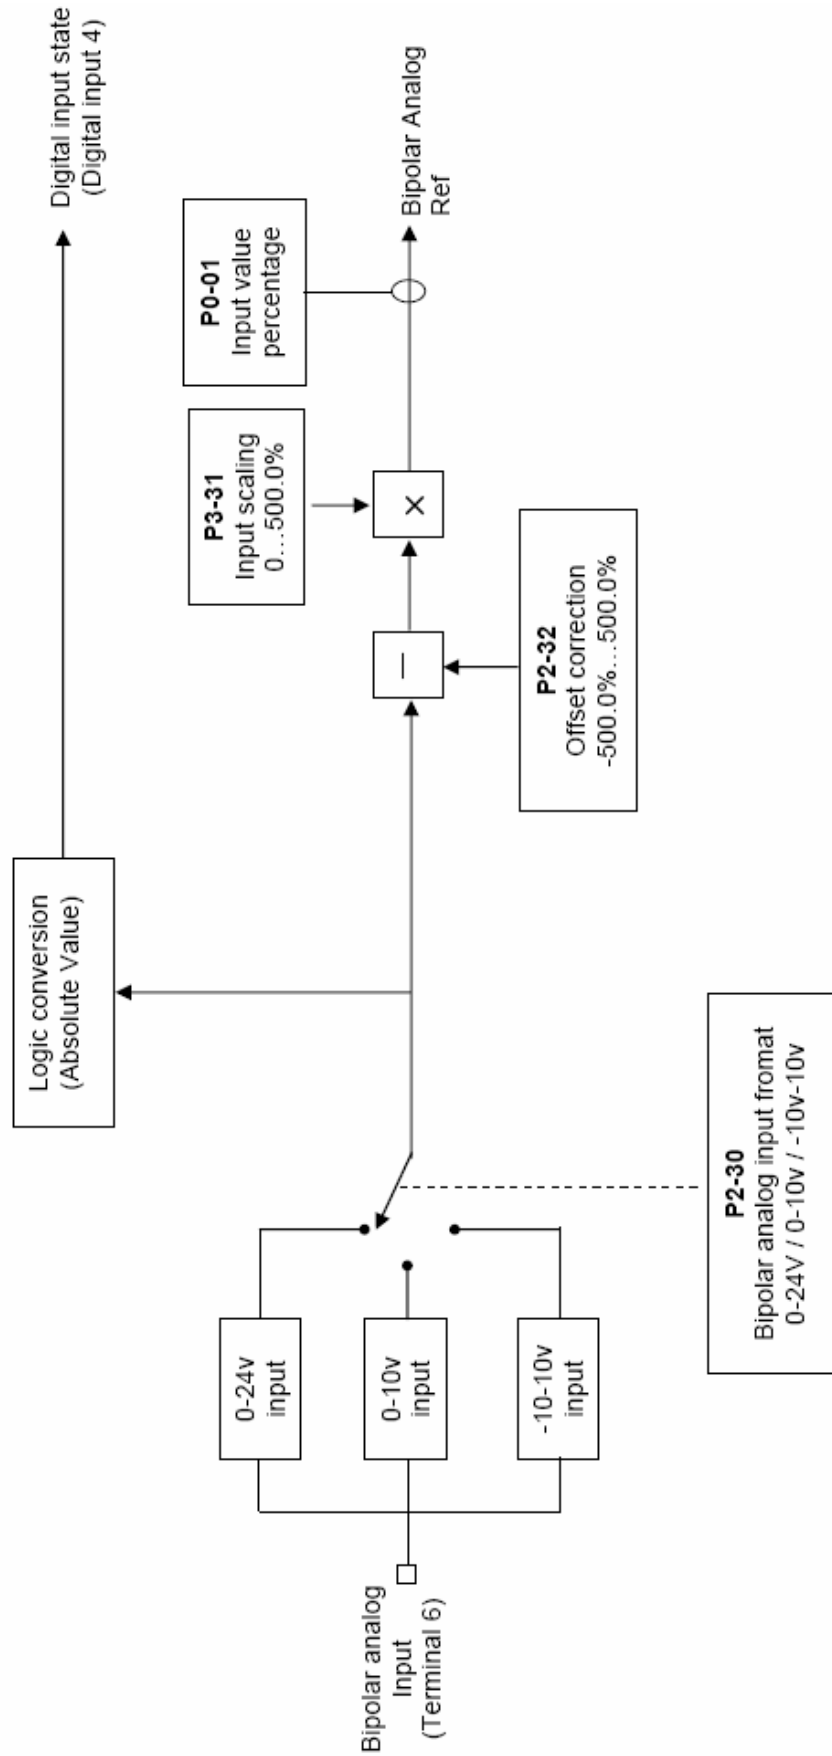


Bipolar analog input sample period is 8ms and the resolution is 12bits

2. Second analog input function setup flowchart

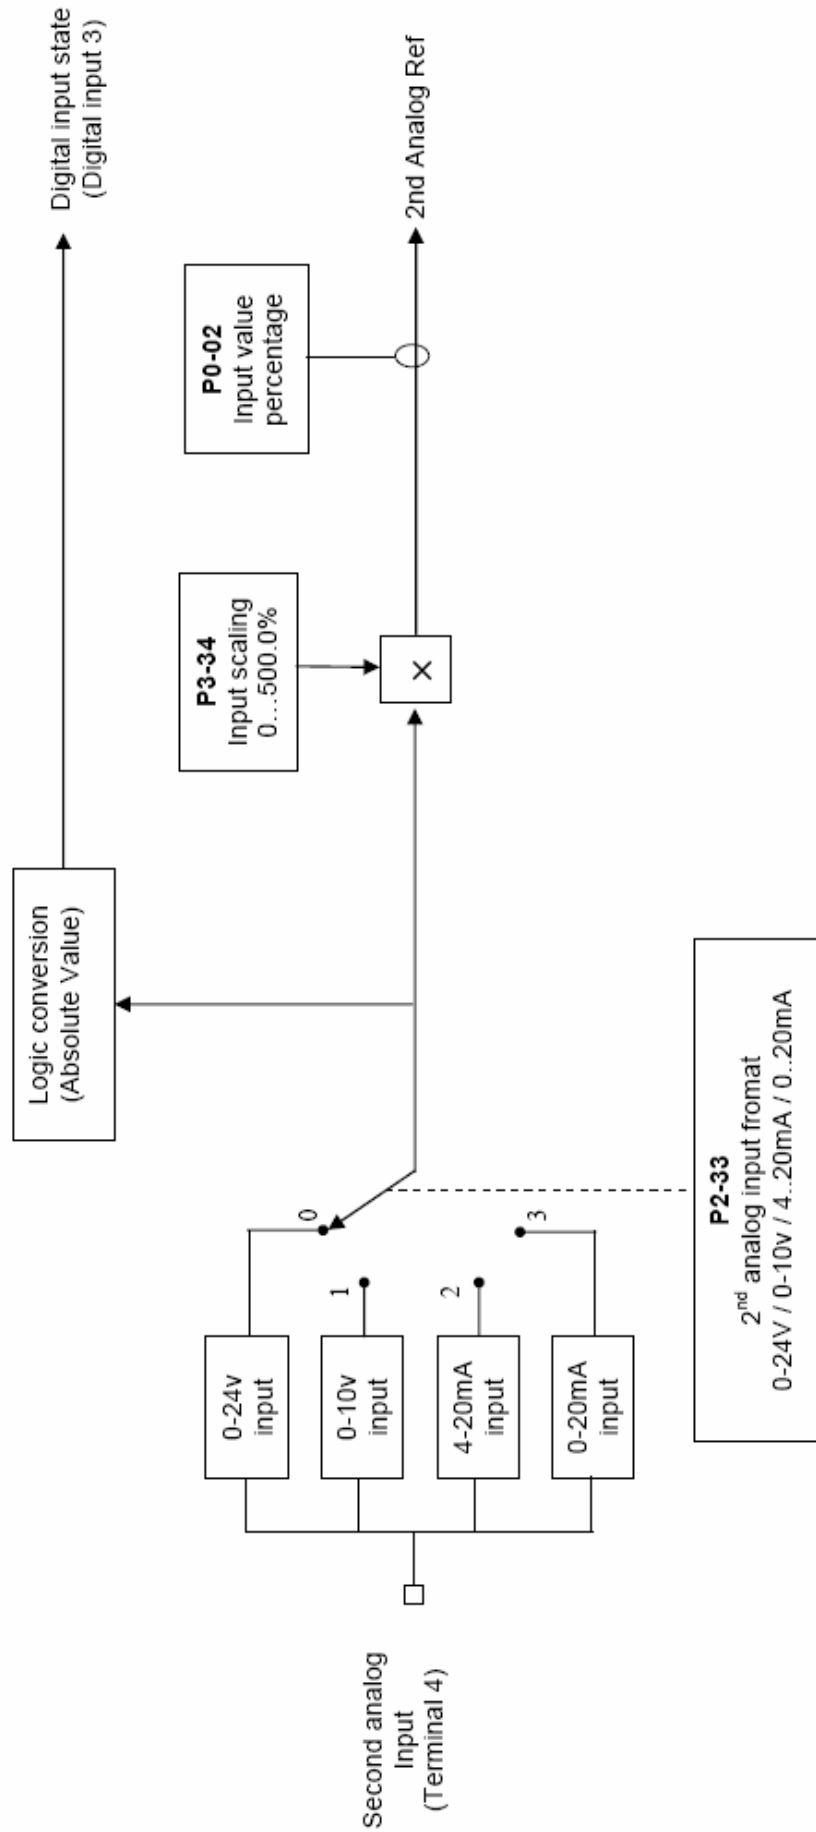

3. Ramp control flowchart (3GV-W)

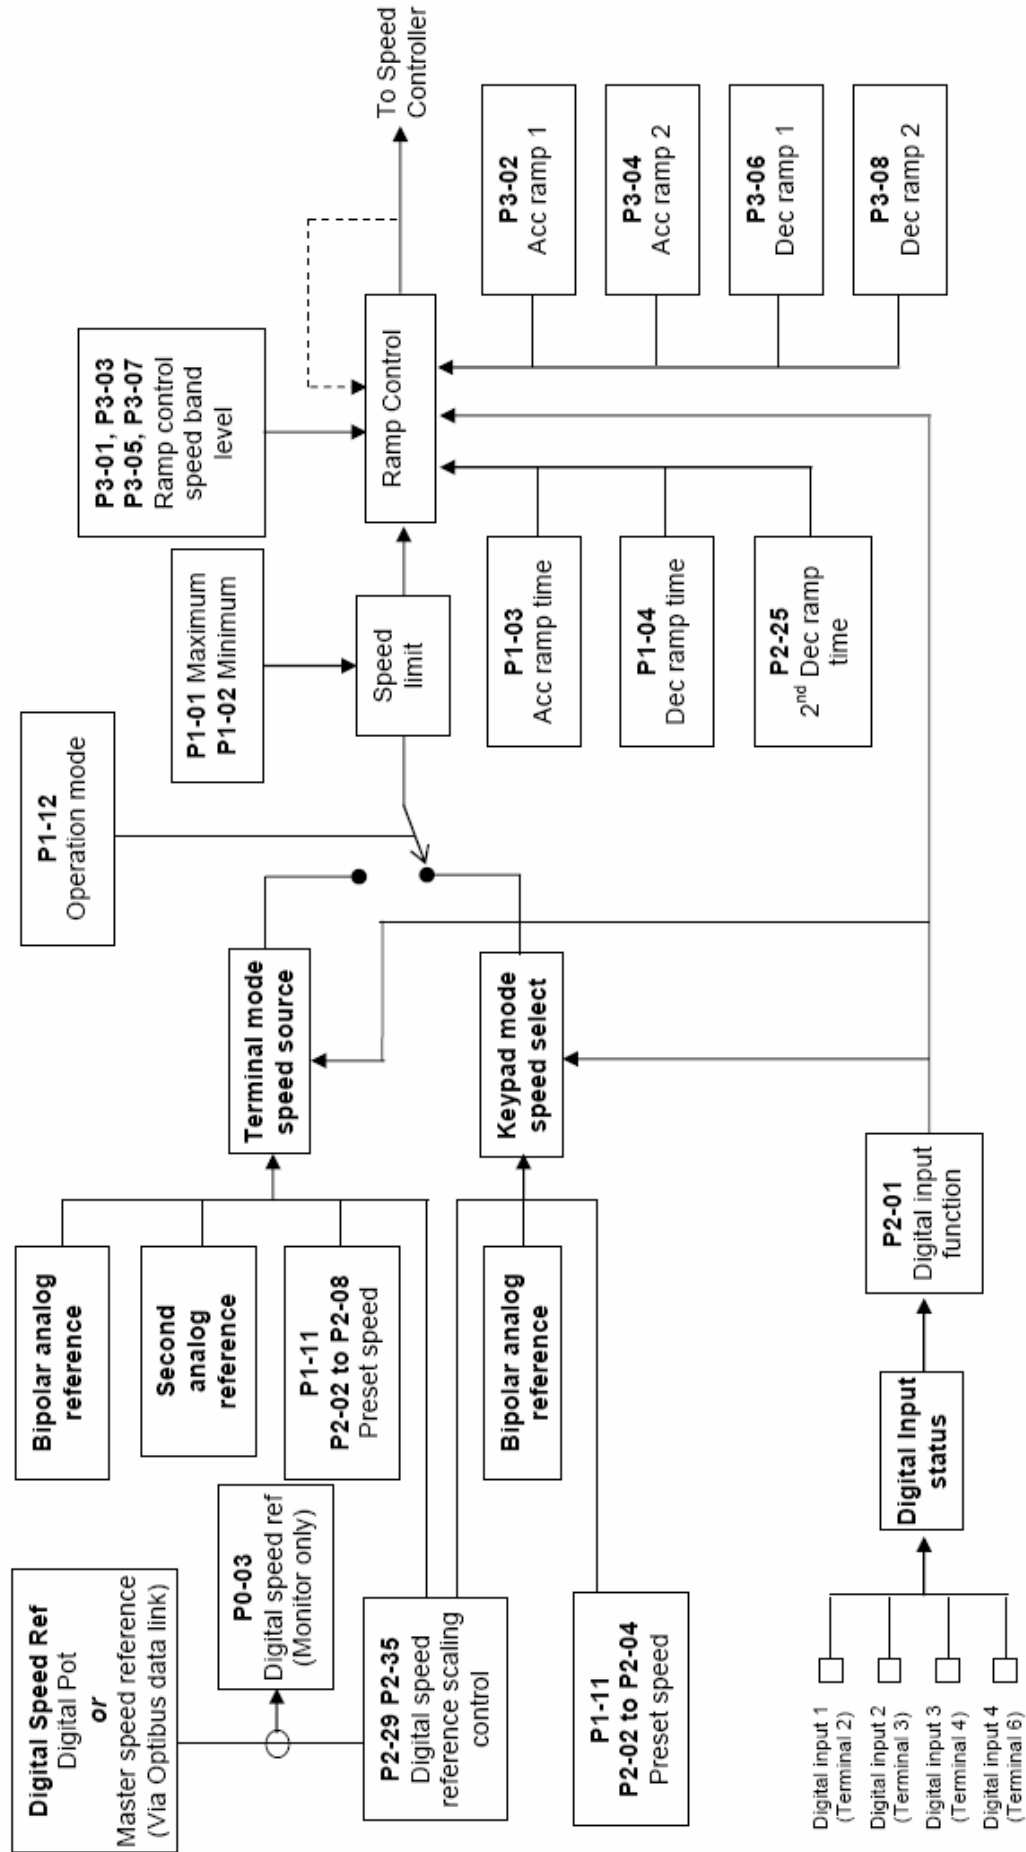

4. Vector speed control logic flowchart

