

# drive.web speedy®

Distributed Process Controller  
models **dw270, dw271, dw274,**  
**dw278, & dw279**



## Installation & Operation Manual

Contents	Page
UL, C, FCC, IC approvals, warnings	1, 2
Basic <b>speedy</b> Identification, Standard Features	2
<b>speedy</b> Options	2
<b>speedy</b> Installation	3
<b>speedy</b> Power and Serial Port Connections, Drive Setup	4
Get <b>savvy</b> ®, USB Plug and Play, Ethernet Networking	5
Get started with <b>savvy</b> engineering & design software	5, 6
Upgrade <b>savvy</b> and <b>speedy</b> , <b>savvy-SFD</b> Upgrade	6
<b>savvyPanel</b> ® Touch Screen Operator Station	7, 8
<b>speedy</b> Comms Interfaces, Modbus, EIP	8
Free <b>drive.web</b> Online Training Seminars	8

### UL Certification Statements

This process control equipment to be supplied by Class2, LPS, limited power supply.

### C Conformity Statements

EMC Standard, EN 61326-1: 2006, Electrical Equipment for Measurement, Control and Laboratory Use.

Emissions Class A, Commercial Equipment.

Immunity Table 2, Industrial Equipment.

LVD Standards, EN 61010-1: 2010, Safety Requirements for Electrical Equipment for Measurement, Control and Laboratory Use and;

**speedy** is an industrial controller designed for permanent installation by qualified professionals.

If it is used in a manner not specified herein the protection provided may be impaired.

**speedy** and its packaging contain recyclable materials.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This Class [A] digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe [A] est conforme à la norme NMB-003 du Canada.

**Warning!** It is essential that you read and understand this entire manual and the entire contents of the **savvy** software **Help** menu before proceeding with your installation and configuration. See page 5 for **savvy** installation instructions. For more information and to download manuals and software, go to [www.driveweb.com](http://www.driveweb.com) or contact us. See page 8.

**Warning!** Your use of **savvy** software and **drive.web** devices may cause motors and machinery to power up with high Voltages or start or operate in an unexpected, dangerous or lethal way. It is essential that you are completely familiar with all of the equipment and the system design before attempting to program or edit a program or connect to any live device. It is also essential that a risk assessment is conducted to identify hazards. Risks must be reduced to tolerable levels.

**Warning!** You are entirely responsible for the configuration or use of any **drive.web** product. By configuring or using these products you agree to indemnify and hold harmless Bardac Corporation, its employees, directors, officers, distributors, and resellers against the consequences of your configuration or use of the products.

**Warning!** Information in this manual is subject to change without notice. You are responsible for verifying the proper operation of your **speedy**. Special care must be taken after loading new firmware or installing new options.

**Warning!** Avoid permanent damage to your **speedy**, never exceed any **min** or **max** values. Do not connect any **speedy** terminal to mains circuits. See page 3 for ratings.

SAVVY, SAVVYPANEL, SPEEDY, BARDAC, and DRIVE.WEB are trade marks of Bardac Corporation, registered in the U.S. and other countries.

hwIP is incorporated into **speedy** firmware. hwIP Copyright (c) 2001-2004 Swedish Institute of Computer Science. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

3. The name of the author may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

## Product Identification - **speedy** Model


**speedy** is a programmable device using **drive.web** distributed control over Ethernet for industrial process automation. To program and use **speedy** you must get the **savvy** software tools from [www.driveweb.com](http://www.driveweb.com).

Find **speedy** firmware version. Use **savvy**, *Get Detailed Info* from **speedy** contextual menu. Page 5.

## Product Identification - Part Numbers

Model number **dw27x** is appended with a two character extension.

Example; **dw270-DM**

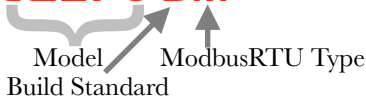

## **speedy** Models

**dw270** Controller with ModbusRTU Client

**dw271** Controller for PL/X Series Digital DC Drives

**dw274** Controller for P2 Industrial Vector Drive

**dw278** Controller for E3 Open-loop Vector Drive

**dw279** Controller with Generic CANopen Master

## **speedy** Standard Features

- **drive.web** distributed process control.
- 10/100Base-T(X) Ethernet. See page 3.
- Update firmware with **savvy** software.
- Ultra-compact, may be permanently bonded inside equipment.
- High-speed CANopen. Up to 1Mb/s.
- ModbusRTU on EIA485 up to 500kb/s
- **Basic Control** function block library.

## **speedy** Options

### Build Standard **A, B, C, and D** - Software Options

**A**=04 and 26, **B** adds 05 and 25, **C** adds 06 and 39, **D** adds 10 and 29.

**04 ModbusTCP/IP** - Slave/server. See page 8.

**05 Process Control** - Recommended for most applications.

**06 Winder Control** - Diameter Calc., Taper Tension, Torque Control

**10 Math** - With IEEE-32 floating-point **Calculator**.

**25 EIP/PCCC** - Slave/server. See page 8.

**26 savvyPanel** - Operator station interface. See pages 7, 8.

**29 Solar** - Calculates sun position azimuth and zenith.

**39 Motion Control** - With **Trapezoid Motion** and **Cam Profile**.



## ModbusRTU Type, Options **M, S, X**

**M** - ModbusRTU Client-Master with speeds up to 500kbps. See page 12

**S** - ModbusRTU Server-Slave. Read or write any parameter in the device remotely. See page 12.

**X** - No ModbusRTU capability.

### **speedy** Installation

**speedy** is designed for permanent installation by qualified professionals.

**Environment** - UL/IEC Pollution Degree 2,

Temperature, Operating, 0°C to 50°C. Storage, -20°C to 60°C.

Altitude 3000m max.

Humidity 95% max. non-condensing.

**Weight** - Standard-25g(0.9oz).

**Power requirements** - Regulated 24VDC  $\pm 5\%$ , 40mA. Do not connect to a distributed DC power network. **A 100mA fast-acting fuse or 1A current-limiting is required!**

Supply from Class 2, LPS, limited power supply only.

**Unisolated serial ports** - Power and serial circuits must have compatible common-mode Voltages.

**Ethernet** - MDI 8P8C, "RJ45" jack, 100baseTX, 10BaseT, Full Duplex, Auto Negotiation, Auto-MDIX, IEEE 802.3ab.

**USB port** - Peripheral-type, USB-C jack.

**Ethernet LEDs** - For setup, troubleshooting, and monitoring:

**100** Green LED indicates 100BaseTX Ethernet connection.

**Link / Activity** Yellow LED. On for Link, flashing for activity.

**Adhesive mounting** - Clean adhering surfaces with alcohol first. Use caution, bond is permanent. Adhere on or near the drive or Modbus device.

Do not obstruct air vents, access points or product labels. Do not attach **speedy** near AC power lines, hot spots, heatsinks, cooling fans, etc.


**7" Power and serial cable** - Included for plug-and-play with *dw274* on **Bardac P2** and *dw278* on **Bardac E3** drives. Part number LA504669.

**Dimensions - 1" clearances must be provided**

on three long sides to promote airflow.



## speedy Power and Serial Port Connections

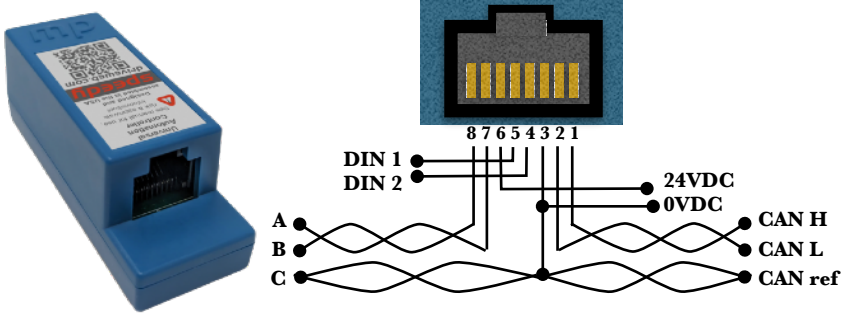

8P8C Number	Connection	Serial Port Name	Description	Ethernet color
1	CAN L	CAN Low	CANbus Low	W-O
2	CAN H	CAN High	CANbus High	O
3	0V, C	SC or Data 0V	Power & Reference Common	W-G
4	DIN 1		Available soon, 30VDC Max.	BL
5	DIN 2		Available soon, 30VDC Max.	W-BL
6	24VDC		24VDC Power Supply Input	G
7	A	A or D0, Data -	Inverting Pin	W-BR
8	B	B or D1, Data +	Non-Inverting Pin	BR

- Serial port connection pairs, **CAN+** and **CAN-**, or **A** and **B**, must share a single twisted-pair. 0V may use one or both conductors in another pair. Do NOT pair 0V with other signals.
- Maximum total CANbus cable length is 1m!
- Multi-drop CANbus networks are not supported. Each **speedy** can connect to only one CANopen server.
- Connect line termination between **A** and **B** at both physical ends of a ModbusRTU network, typically 150Ω, 0.5W or, for networks with line polarization, 120Ω, 0.25W and 1nF, 10V cap, in series.
- Do NOT provide line termination on CANbus or any network with a **Bardac** AC drive.
- Digital inputs, DIN1 and DIN2 will be available soon via a firmware update.

**Signal wiring notes - Use twisted-pair wiring.** All wiring outside of the metal enclosure should be shielded cable with individually shielded twisted-pairs such as **Belden 8163**. Ground the shield at only one end with a 360° clamp where the shield enters your metal enclosure. Maximum serial cable length is 1m!

## Set up your Computer - Get *savvy*

Use free *drive.web savvy* software to setup, program, monitor, and perform data trending.

- Go to [www.driveweb.com](http://www.driveweb.com) and click on *Get savvy*, or contact us to get the latest version of *savvy*.



## *speedy* USB - Plug and Play

Access the *speedy* and its local Ethernet network.

## *speedy* Ethernet Networking & Programming

Assigning an invalid or duplicate IP address will cause serious network malfunctions!

- Find useful networking information. Under the *Help* menu click on *Getting Started with savvy* section.
- *speedys* ship with IP address, 10.189.x.x, derived from the serial number. The number always starts with 0-4-bb-x. The last two octets are used to assign the as-shipped IP address; Example, if the serial number is 0-4-bb-00-1a-2b, hex 1a converts to decimal 26. 2b is 43 decimal. The IP address is 10.189.26.43.
- Use *Category 5e* cable or better, with 8P8C/RJ-45 connectors for each *drive.web* device and the host computer.
- For systems with more than one *drive.web* device, use an Ethernet switch for all *drive.web* devices and computer.



## Get started with *savvy*

- We strongly recommend attending our free online training seminars. See page 8.
- We strongly recommend you read the *User Manual* and *Getting Started Guides* under the *Help* menu.
- Use *Create Phantom* in the *Directory* menu to explore *drive.web* products and options, design, and configure offline. *Export Data* to save your work. *Import Data* into phantoms to work offline.

*savvy* Window Title Bar indicates the current view.

**Status Bar**, above the viewing area, provides **Navigation Arrows** and object and location data.

- *savvy* views are hierarchical with the *Device Directory View* at top. Use the *Navigation Arrows* to go up, back, or forward. Window menus change as you navigate.

**Hover cursor over active object**, device, function block, connection, or parameter icon to view object information in the *Status Bar* and reveal a *Hover Button*.




**Click a Hover Button or right-click** an active object to access a *Contextual Menu*. See below.

## Device Directory Window

**Warning!** Changing a device IP address **WILL** disrupt its network connections! If a *speedy* is communicating with other devices, be prepared for system disruption. In the *File* menu choose *Utility > Remap Export File* to remap a *dw-system* file with different IP address(es).

- Select *File>Administrate>Set IP Addresses for System*.
- *speedy* serial number is also its *MAC Address*.
- Enter a valid IP address and click OK.
- An icon appears with IP address beneath.

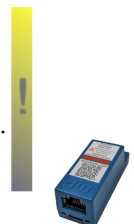

Get started with **savvy** continued...

- If the icon at right appears, a network connection problem exists. Check connections, LEDs, and that **speedy** IP address is within the computer's Ethernet subnet mask.



10.189.189.189



**Warning!** Importing data into your **speedy** will result in immediate execution of that configuration. **Dangerous Voltages and rotating machinery may result!** Use a phantom to preview a configuration.

- *Directory > Import / Export Data.* All device configurations and connections in the directory in one *.dw-system* file.

### **speedy** Icon Contextual Menu

- **Change Name** - Name your **speedy** for easy identification.
- **Import / Export Device Data...** - Load / save configuration data to / from this **speedy** only.
- **Unlock, Lock, Set Password** - Choose **Restrict Modification** for view-only, or **Restrict All Access**.



Laminator Stage 2

Click the **speedy** icon to view the device configuration.

### Function Block Engine Window - FBE Menu

(Standard **savvy**, no **SFD**)

- Add function blocks in the order to be processed. Processing order is left to right, top to bottom.

Click function blocks to view parameters and details.

Connect between parameters and other **drive.web** devices.

**Warning!** Making a connection results in immediate execution of that connection. **Dangerous Voltages and rotating machinery may result!**




- Under the **File** menu, choose **New Viewer...** and then, **File > Open Device Directory.**

- With two viewer windows, click a parameter, drag and drop onto a parameter in the other viewer.

**Parameter Contextual Menu** - Most parameter data is 16-bit. Data is formatted, limited, and scaled depending on the parameter. Use **Get Info** or **Re-Scale...** to verify or change.

Click parameters for the **Setter Box** - Increment, decrement, default, last state, or keyboard entry.

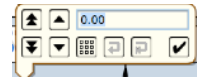

Click blue connection block or arrow to jump to other end.

## Upgrade **savvy** and **speedy**

Upgrade **savvy** with **SFD** Signal Flow Diagram.


Upgrade **speedy** with software options.

Process credit cards or **Vouchers** online or **Coupons** offline.

- To upgrade **savvy** go to the **Commerce** menu, select **Upgrade savvy**, check desired options, click OK.
- To upgrade **speedy**, choose **Upgrade Device...** in its contextual menu, check desired options, click OK.
- To process **Vouchers**, choose **Pay>Online Via Vouchers** in the **Shopping Cart**. Enter codes on separate lines.
- To process **Coupons**, use **Commerce** menu > **Coupon Manager**. Enter codes in the top box, click the **Add** button, and the coupon is recognized. Click **Apply**.

## savvy-SFD Signal Flow Diagram Upgrade

- With **savvy-SFD**, build systems graphically. The live drawings are stored in your **speedy**.
- Set drawing borders and annotate multi-page drawings.
- A filterable list of function blocks and connections is at the left of the **Signal Flow Diagram** showing **program execution order** from top down. Change execution order by dragging function blocks up or down the list. In this picture, **ENC1 Speed** function block is moved so that it is processed after **ENC Phase Lock**.

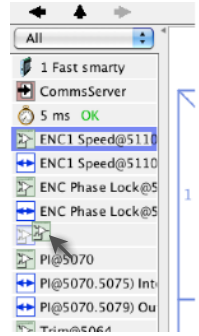

## savvyPanel Operator Station

Computers, Apple® mobile digital devices; iPad®, iPhone®, and iPod Touch® are operator touch stations with **savvyPanel**. Requires Windows, Mac OS X, Linux-based Ubuntu, Android, or iOS®.

- Configurations are stored in the **drive.web** devices.
- **savvy-SFD** upgrade is required to edit or build **savvyPanel** systems.
- **dwOption-26 savvyPanel**, must be installed in **drive.web** devices to enable the full suite of tiles. A limited set is available without the option.





## Get savvyPanel free from App Stores


- When your smart device is connected to the internet via WiFi, demo mode connects to a live drive system in our plant in Maryland, USA.
- Explore the demo with **savvy**. Select **File** menu > **Demo Mode** > **Discover Internet Demo Devices**.

## savvyPanel Pages

**Systems Page** where multiple **savvyPanel** systems are present.

- A **savvyPanel** system may contain tiles from many **drive.web** devices.
- A **drive.web** device contributes to only one **savvyPanel** system.
- Touch the systems button,  or , in the window bar to access the systems page from home page. Lock this button with home password.

**Home Page** is the first operator page in a **savvyPanel** system.

- Access home page from any operator page with the home button, . Lock with the home password.

**Operator Pages** show graphic, page-link, and parameter tiles.

- Pages can be renamed. Page name appears in window title bar.




## savvyPanel Tiles

**Parameter Tiles** - Touch a settable parameter to set. Setter includes slider, keypad, 1x and 10x increment and decrement, return-to-default, and revert.

**Graphic Tiles** - Create diagrams with process elements.

**Page-Link Tiles** - A graphic tile that is also a page-link. Touch to change the view to that page.

**Device Tiles** - Link to device's function block engine.

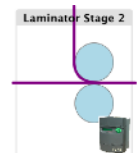



## Function blocks enable **savvyPanel** actions

**Alarm Annunciator** - Provides a system-wide alarm annunciation when active. Touch to view page 255.

**Presence Monitor** - Indicates the presence of a tagged **savvyPanel** application viewing a particular page.



**Latch** and **SR Latch** - For lighted start-stop pushbuttons.

**Setpoint & Monitor** - Adjust meter and setter range. Dual blocks enable dual-display meters.

**Enumerated Parameter** - In **Utility** group. Only custom enumerations appear in the setter and multi-position switch.

## **savvyPanel** Launch, Setup, and Important Notes

- See the **savvy** user manual for detailed instructions.
- Launch **savvyPanel** via command line or batch file.
- Limit operators to **savvyPanel** only. Specify start system and page.
- Discover devices automatically, specifically by discovery file, or filtered by group and/or **savvyPanel** name.
- Operator's note: If communication with a **drive.web** device is interrupted, affected tiles indicate a yellow bar with a warning symbol. The tile is not updated.

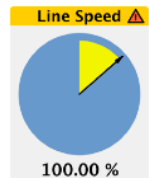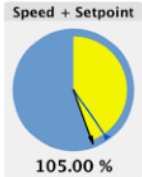

**⚠ Important Design Note** - An over-range enumeration is required if an out-of-range value could cause a hazard.

## **speedy** Comms Interfaces-Modbus & EIP/PCCC

**⚠ Warning!** Use of **speedy** comms interfaces, ModbusTCP, ModbusRTU, and EIP/PCCC, may cause motors and machinery to energize with high Voltages, or start, or operate in an unexpected, dangerous, or lethal way. **⚠**

- Find Modbus specifications - <http://modbus.org/specs.php>

### **speedy** Comms Server **dwOption-04, -25**

- **Note!** You cannot write or force parameters that are read-only or have incoming **drive.web** connections.

#### **dwOption-04** ModbusTCP/IP slave/server

- Supported Modbus Function Codes; 1 thru 6, 15, and 16.
- Supports up to **five simultaneous clients/masters**.

#### **dwOption-25** EIP/PCCC Server

- Supports PLC5 Typed-Write and Typed-Read commands.
- See Appendix B of the **savvy** User Manual for information and **drive.web** parameter IDs mapping to PLC5.
- Supports up to **two simultaneous clients**.

## **CANopen** Setup

Find the **CANopen Setup** function block and click on the **Program** parameter to begin setting up the interface.

- Setup baud rate, the node ID of the single CANopen server and other important details under the **Configuration** tab.
- The PDO addresses in the server are setup in the **Setup Actions** tab.

## **ModbusRTU** Comms & Data Function Blocks

- Modbus Function Codes **FC 01-06** and **16** are supported. Also special Yaskawa Holding Register.

## **drive.web** Training Courses

Free online interactive training seminars take about one hour.

Specialized online and factory training sessions are also available.

To register email [training@driveweb.com](mailto:training@driveweb.com) or call.