

OPTIDRIVE EI Single Phase Output

Enclosed IP55 / NEMA 12

AC Variable Speed Drive 0.37 – 1.1kW / 0.5 – 1.5HP



Installation and operating instructions

SAFETY NOTICES
It is the responsibility of the installer to ensure that the equipment or system into which the product is incorporated complies with the EMC legislation of the country of use. Within the European Union, equipment into which this product is incorporated must comply with 89/336/EEC, Electromagnetic Compatibility.


WARNING The level of integrity offered by the Optidrive control functions – for example stop/start, forward/reverse and maximum speed, is not sufficient for use in safety-critical applications without independent channels of protection. All applications where malfunction could cause injury or loss of life must be subject to a risk assessment and further protection provided where needed. Within the European Union, all machinery in which this product is used must comply with Directive 89/392/EEC, Safety of Machinery. In particular, the electrical equipment should comply with EN60204-1.

WARRANTY
All Inverter Drives Ltd (IDL) products carry a 2-year warranty, valid from the date of manufacture. Complete Warranty Terms and Conditions are available upon request from your IDL Authorised Distributor.

CAUTION


- Carefully inspect the Optidrive before installation to ensure it is undamaged
- Store the Optidrive in its box until required. Storage should be clean and dry Temp. Range -40°C to +60°C
- Install the Optidrive on a flat, vertical, flame-resistant vibration-free mounting according to EN60529 if specific Ingress Protection ratings are required.
- Indoor Use Only.
- Flammable material should not be placed close to the drive
- The entry of conductive or flammable foreign bodies should be prevented
- Max. ambient temperature 40°C, min. -5°C. Refer to table on reverse side.
- Relative humidity must be less than 95% (non-condensing).
- The Optidrive is suitable for use on a circuit capable of delivering not more than 5KA (50Hp) / 10KA (51-200HP) symmetrical amperes, 480V maximum.

Lock Off:
On the switched models the main power isolator switch can be locked in the 'Off' position using a 20mm standard shackle padlock (not supplied).

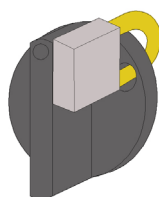

WARNING

- Optidrives should be installed only by qualified electrical persons and in accordance with local and national regulations and codes of practice. The Optidrive has an Ingress Protection rating of IP55. For higher IP ratings, use a suitable enclosure.
- Electric shock hazard!** Disconnect and ISOLATE the Optidrive before attempting any work on it. High voltages are present at the terminals and within the drive for up to 10 minutes after disconnection of the electrical supply
- Where supply to the drive is through a plug and socket connector, do not disconnect until 10 minutes have elapsed after turning off the supply
- Ensure correct earthing connections
- The earth cable must be sufficient to carry the maximum supply fault current which normally will be limited by the fuses or MCB

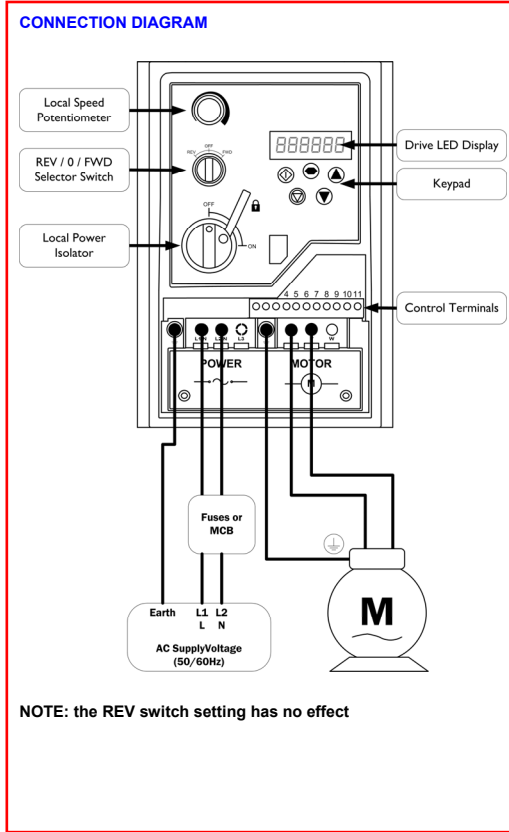

ELECTRICAL INSTALLATION
Connect drive according to diagram (above), ensuring that motor terminal box connections are correct (see diagram, below). Refer to the **ELECTRICAL DATA** overleaf for the sizes of cabling and wiring. It is recommended that the power cabling should be 3-core or 4-core PVC-insulated screened cable, laid in accordance with local industrial regulations and codes of practice.

OPERATION – USING THE KEYPAD MANAGING THE KEYPAD
When the drive is delivered from the factory, only the Standard Parameter Set (see overleaf) is accessible. To access the Standard Parameter Set, press the Navigate key ⇄ for >1 sec.


- Scroll through P-01 to P-14 (and roll over to P-01) by pressing ▲ or ▼
- To display the parameter value, press ⇄
- To edit the parameter value, press ▲ or ▼
- To return to the parameter number, press ⇄
- To store a value and / or exit from edit mode, press ⇄ for >1 sec or press no button for >20 sec.

To access the Extended Parameter Set, set P-14 = 101 and press ⇄

NOTE To restrict unauthorised access, make P-37 = any value from 0 to 9999.

- When in the Extended Parameter Set (except P-00), the display will revert to normal if no button is pressed for >20 sec.

TO RESTORE ALL DEFAULT VALUES, stop the drive and when display shows StoP, press and hold the ▲, ▼ and STOP keys simultaneously for 1 second. The display will show P-rEF. Access code P-37 will revert to 101 but the hours-run meter P-39 is not affected. Press STOP to resume normal operation.

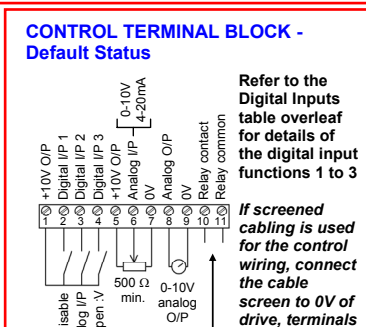

OPERATING IN KEYPAD MODE

Set P-12 = 1 (this allows the Optidrive to be controlled from the keypad):

- Enable the drive by closing digital input 1. The display will show StoP.
- Press the START key. The display shows H 0.0.
- Press ▲ to increase speed
- The drive will run forward, increasing speed until ▲ is released.
- CAUTION:** the rate of acceleration is controlled by the setting of P-03, check this before starting.
- Either Press ▼ to decrease speed
- The drive will decrease speed until τ is released. The rate of deceleration is limited by the setting in P-04
- Or Press the STOP key. The drive will decelerate to rest at the rate set in P-04.
- The display will finally show StoP at which point the drive is disabled
- To preset a target speed prior to enable press the stop key whilst the drive is stopped. The display will show the target speed, use the ▲ and ▼ to adjust as required then press the Stop key to return the display to StoP. Pressing the START key will start the drive accelerating to the target speed.

The operation of the keypad can be duplicated using remote pushbuttons connected to the control terminals, see Application Note AN21. In this mode, if P30 is set to Auto-0..4, then the drive will run as soon as the drive enable is applied (terminal 1 & 2 is closed).

TO SAVE CHANGES to Parameter settings, switch the power supply off and wait for the drive to power down (screen blank) before switching on. NOTE that this assumes P-38 = 0 (default). If P-38 = 1, changes are not saved.

User Guide

All rights reserved. No part of this User Guide may be reproduced or transmitted in any form or by any means, electrical or mechanical including photocopying, recording or by any information storage or retrieval system without permission in writing from the publisher.

Copyright Inverter Drives Ltd © 2006

The manufacturer accepts no liability for any consequences resulting from inappropriate, negligent or incorrect installation, or adjustment of the optional operating parameters of the drive or from mismatching of the drive to the motor.

The contents of this User Guide are believed to be correct at the time of printing. In the interests of a commitment to a policy of continuous improvement, the manufacturer reserves the right to change the specification of the product or its performance or the contents of the User Guide without notice.

SAFETY
This variable speed drive product (Optidrive) is intended for professional incorporation into complete equipment or systems. If installed incorrectly it may present a safety hazard. The Optidrive uses high voltages and currents, carries a high level of stored electrical energy, and is used to control mechanical plant that may cause injury. Close attention is required to system design and electrical installation to avoid hazards in either normal operation or in the event of equipment malfunction.

System design, installation, commissioning and maintenance must be carried out only by personnel who have the necessary training and experience. They must read carefully this safety information and the instructions in this Guide and follow all information regarding transport, storage, installation and use of the Optidrive, including the specified environmental limitations. Please read the **IMPORTANT SAFETY INFORMATION** below, and all **Warning** and **Caution** boxes elsewhere.

SAFETY NOTICES
WARNING is given where there is a hazard that could lead to injury or death of personnel
CAUTION is given where there is a hazard that could lead to damage to equipment

Bardac Corporation www.bardac.com
40 Log Canoe Circle, Stevensville, MD 21666 USA
USA Toll Free Phone: 1-888-667-7333 (1-888-ON SPEED)
International Phone: 410-604-3400 Fax: 410-604-3500
Made in the UK by Inverter Drives Ltd Iss3.01

WARNING

- The STOP function does not remove potentially lethal high voltages. ISOLATE the drive and wait 10 minutes before starting any work on it
- Parameter P-01 can be set to operate the motor at up to 3,000 rpm, hence use this parameter with care
- If it is desired to operate the drive at any frequency/speed above the rated speed (P-09/ P-10) of the motor, consult the manufacturers of the motor and the driven machine about suitability for over-speed operation
- The fan (if fitted) to the heatsink of the Optidrive starts automatically when the heatsink temperature reaches approximately 40°C. When the heatsink is at room temperature the fan will be stopped.

CAUTION

- Ensure that the supply voltage, frequency and no. of phases (1 or 3 phase) correspond to the rating of the Optidrive as delivered.
- An isolator should be installed between the power supply and the drive.
- Never connect the mains power supply to the Output terminals U & V.
- Protect the drive by using slow-blowing HRC fuses or MCB located in the mains supply of the drive
- Do not install any type of automatic switchgear between the drive and the motor
- Wherever control cabling is close to power cabling, maintain a minimum separation of 100 mm and arrange crossings at 90°
- Ensure that screening or armouring of power cables is effected in accordance with the connections diagram below
- Ensure that all terminals are tightened to the appropriate torque (see table)

IMPORTANT SAFETY INFORMATION
Safety of machinery, and safety-critical applications
Optidrive hardware and software are designed and tested to a high standard and failures are unlikely.



Electromagnetic Compatibility (EMC)

Optidrive is designed to high standards of EMC. EMC data is provided in a separate EMC Data Sheet, available on request. Under extreme conditions, the product might cause or suffer disturbance due to electromagnetic interaction with other equipment. It is the responsibility of the installer to ensure that the equipment or system into which the product is incorporated complies with the EMC legislation of the country of use. Within the European Union, equipment into which this product is incorporated must comply with 89/336/EEC, Electromagnetic Compatibility.

When installed as recommended in this User Guide, the radiated emissions levels of all Optidrives are less than those defined in the Generic radiated emissions standard EN61000-6-4. When fitted with an optional internal filter, the conducted emission levels are less than those defined in the Generic radiated emissions standard EN61000-6-3 (class B) for screened cable lengths of < 1m and with EN61000-6-4 (class A) for screened cable lengths of < 5m.

STANDARDS CONFORMITY
The Optidrive E I55 conforms with the following standards

- CE marked for low voltage directive
- IEC 664-1 Insulation coordination for equipment within low voltage systems
- EN61800-3 Adjustable Speed electrical power drive systems – Part 3 (EMC)
- EN 61000-6 / -2, -3, -4 Generic Immunity / Emissions standards (EMC)
- UL508C Power conversion equipment

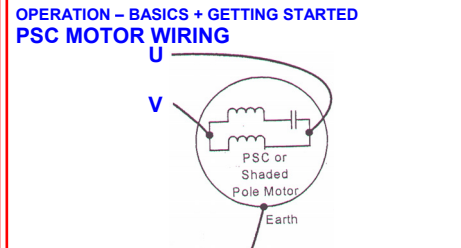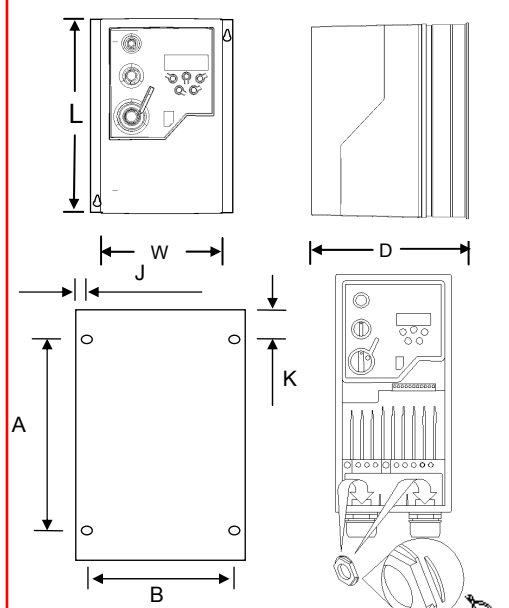

DIMENSIONS - NOTE: INDOOR USE ONLY
IP55 ODE DIMENSIONS & TORQUE SETTINGS (inc. Feet)

	Size 1	Size 2
Length / mm	200	310
Width / mm	140	165
Depth / mm	162	176
Weight/ kg	2.3	4.5
A / mm	142	252
B / mm	128	153
J / mm	6.0	6.0
K / mm	25.0	25.0
Fixings	2 * M4	4 * M4
Power terminal torque settings	1 Nm	1 Nm
Control terminal torque settings	0.5Nm	0.5Nm

Gland Hole Sizes:

	I/P & O/P Power (Φ)	Centred Knockout (Φ)	Terminal Cover Knockout (Φ)
Size 1	(22mm)	(22mm)	(17mm)
Size 2	(25mm)	(22mm)	(17mm)

Recommended Gland Type:
SkinTop UL approved (UL94-V0) Type12/IP55 non-metallic cable gland or non-rigid conduit

	I/P & O/P Power	Centred Knockout	Terminal Cover Knockout
Size 1	PG13.5 / M20	PG13.5 / M20	PG9/ M16
Size 2	PG16 / M25	PG13.5 / M20	PG9/ M16

GROUNDING (EARTHING)
The ground terminal of each Optidrive should be individually connected DIRECTLY to the site earth (ground) busbar (through the filter if installed) as shown. Optidrive ground connections should not loop from one drive to another, or to, or from any other equipment. Ground loop impedance must conform to local industrial safety regulations. To meet UL regulations, UL approved ring crimp terminals should be used for all earth wiring connections.

EASY STARTUP
When delivered, the Optidrive is in the default state, meaning that it is set to operate in terminal mode and all parameters (P-xx) have the default values as shown overleaf.

- Connect a control switch between the control terminals 1 and 2 (FWD position).
- Connect a potentiometer (500 Ω min to 10 kΩ max) between terminals 5 and 7, and wiper to terminal 6 (Local Speed Potentiometer).
- Set the control switch between pins 1 and 2 open so that the drive is 'disabled' (0).
- With the potentiometer set to zero, switch on the supply to the drive. The display will show StoP.
- Close the control switch, terminals 1-2 (FWD). The drive is now 'enabled' and the output frequency/speed are controlled by the potentiometer. The display shows zero speed in Hz (H 0.0) with the potentiometer turned to minimum.
- Turn the potentiometer to maximum. The motor will accelerate to 50Hz (the default value of P-01) under the control of the accelerating ramp time P-03. The display shows H 50.0 (50Hz) at max speed.
- To display motor current (A), briefly press the Navigate key ⇄.
- Press ⇄ again to return to speed display.
- To stop the motor, either turn the potentiometer back to zero or disable the drive by opening the control switch (terminals 1-2) (0).

If the enable/disable switch is opened the drive will decelerate to stop at which time the display will show StoP. If the potentiometer is turned to zero and the enable/disable is closed the display will show 0.0Hz, if left like this for 20 seconds the drive will go into standby mode, display shows Stndby, waiting for a speed reference.

Values in () are for the settings on the switched variants

PARAMETER ZERO

- Provides a read only window into the motor control software allowing key internal values to be viewed. This is useful for following signals through the drive control system when troubleshooting.
- Access, scroll, change and exit are as for any other parameter. The selected variable is at the left hand side of the display.
- There are 9 different windows listed below:

1 Unscaled analog input (%)	6 Stator field frequency (Hz)
2 Speed ref. via scaled	7 Applied motor voltage (V) analog input (Hz)
3 Pre-ramp speed ref. (Hz)	8 DC bus voltage (V)
4 Post-ramp speed ref. (Hz) value	9 Internal thermistor (NTC)
5 Not used	

